



my tunes MP3 player


instructions

112986/113780 0506

Early Learning Centre®
Swindon SN3 4TJ England.

Customer Service Department
01793 443322

features

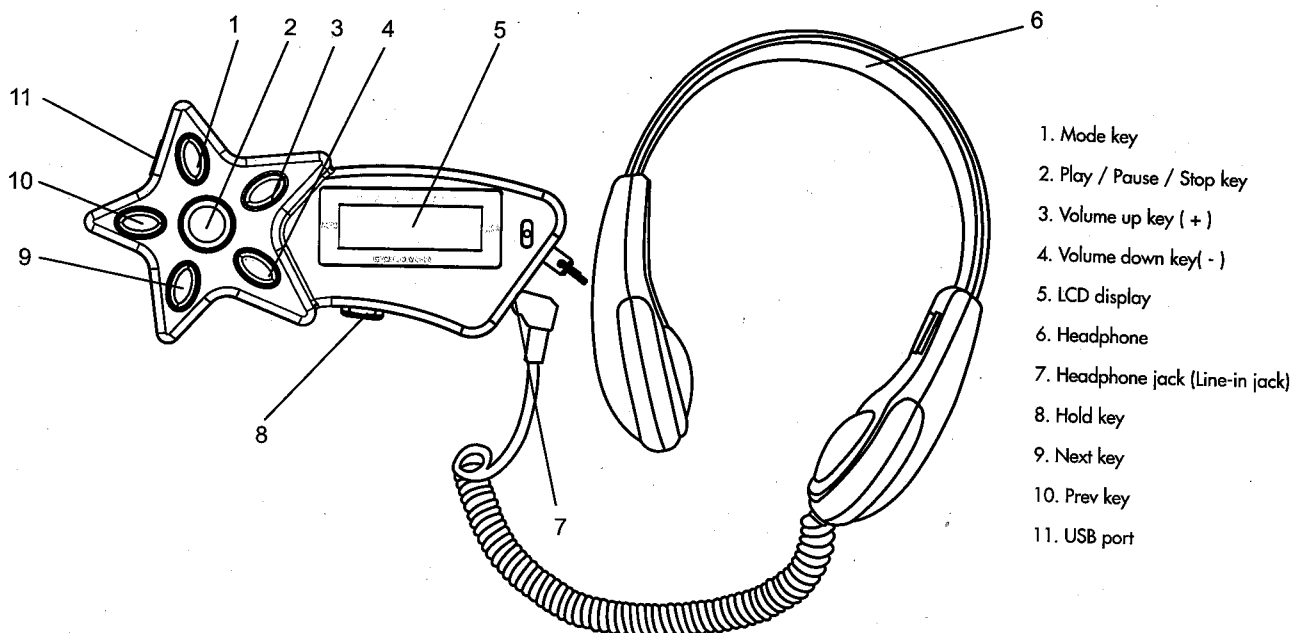

1. Mode key
2. Play / Pause / Stop key
3. Volume up key (+)
4. Volume down key (-)
5. LCD display
6. Headphone
7. Headphone jack (Line-in jack)
8. Hold key
9. Next key
10. Prev key
11. USB port

INSTALLATION OF BATTERIES

Place the set face down on a flat surface. Press down on the tab to open the battery cover. Insert 1 size "AAA"/UM-4/LR03 or equivalent Alkaline Battery as indicated inside the battery compartment. Close the battery cover and snap the tab in place.


Note:

- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Remove all the batteries when the toy is not in use for a long period of time.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- The packaging has to be kept since it contains important information.

Special features:

1. Support Mp3/WMA/ADPCM playback.
2. Support Multi-language menu. 10 hours playing time.
3. Built-in digital recording function, recordings can last 520 minutes in ADPCM format.
4. Dot matrix display, blue LCD backlight display.
5. Support CD record (line-in)
6. Seven EQ modes: Jazz, Classic, Rock, Pop, Natural, Soft, DBB.
7. ID 3 tags display.
8. Support OS of windows 98/ME/2000/XP/MAC, drive less above win2000.
9. USB version 2.0 interface, transform various file and data from PC.

Graphic LCD

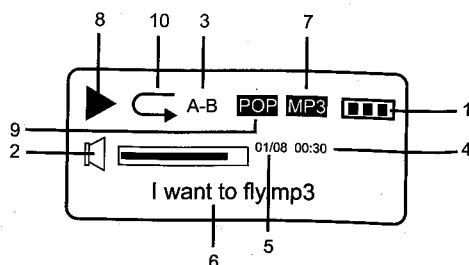


1. Battery indicator
2. Volume
3. Segment repeat
4. Playing time
5. Current track/ Total tracks
6. Song title/ Artist
7. Music format
8. Play mode
9. EQ mode
10. Repeat

features

Operation

1. Power on

After inserting the batteries, press the Play / Pause / Stop key to switch on the unit.

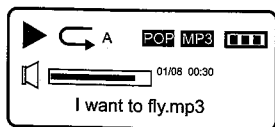

2. Power off

Press and hold the Play / Pause / Stop key to switch off the unit.


Note: If there is no response, it means the player is in stop mode; it will turn off automatically.

3. Play/Pause/Previous music/Next music/Rewind/Fast forward

After power on, press the Play / Pause / Stop key to play music; press the same key to pause the song.

Press the NEXT button to skip to the next song. Press and hold the NEXT button to fast forward the song.

Press the PREV button to go back to the previous song. Press and hold the PREV button to rewind the song.

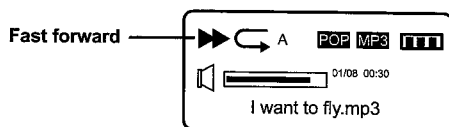

4. To adjust volume (up/down)

Click the VOL+ button to increase volume

Click the VOL- button to reduce volume

5. To repeat a particular segment of a song

During play mode, press the MODE key to set the beginning point of the segment you would like to repeat (A-). Let the song play, then press the MODE key again to cap your segment selection. (A-B). The player will repeat the segment between point A-B. To cancel segment repeat, press the MODE key again.

6. Main Menu

Press and hold the Mode key to enter the main menu. In the main menu, use the PREV or NEXT key to scroll between the different modes. Press the MODE key to make your selection.

Play music

After entering this menu, press the MODE key to play your music files.

Voice

After entering this menu, press the MODE key to play your voice files.

Setting

After entering this menu, use the PREV or NEXT key to scroll between the different modes. Press the MODE key to make your selection.

1). EQ set

Use the PREV or NEXT key to scroll through the different modes. Press the MODE key to make your selection.

Choose from one of the seven EQ sets (Natural, Rock, Jazz, Classic, Pop, Soft and DBB) then press the MODE key to confirm.

2). Play mode

Choose from one of the seven play modes (Normal, Repeat All, Repeat one, Random, Random all, Preview) then press the MODE key to confirm.

3). Contrast

Press the PREV button to reduce the level of contrast, press the NEXT button to increase the level of contrast. Press the MODE key to confirm.

4). Backlight

Press the PREV or NEXT button to increase or decrease the duration of the backlight (0, 5s, 10s, 15s, 20s, 25s, 30s, 35s, 40s or 45s). Press the MODE key to confirm.

5). Power set

Press the PREV or NEXT button to adjust the duration time before auto power off during standby mode (1 min, 2mins, 5mins or disable). Press the MODE key to confirm.

*Auto power off will be disabled in the disable mode.

6). Record set

Press the PREV or NEXT button to choose from one of the four modes (Source, Encoder, Channel or Exit)

Source:

Press the MODE key to select between recording sources: MIC or LINE-IN.

If you intend to use the built-in microphone to make recordings, choose MIC. Otherwise, select LINE-IN to record through devices such as: VCD, DVD, MD, MP3 players or voice recorders. Press the MODE key to confirm. When connecting an external device, insert the line-in cable to the line-in jack (earphone jack).

Encoder

After entering this menu, press the MODE key to choose the encoding format: IMADPCM, MSADPCM or ADPCM.

Channel

After entering this menu, press the MODE key to choose a channel: Stereo or Mono.

Exit

After entering this menu, press the MODE key to exit.

7). Language

After entering this menu, press the MODE key and then press the PREV or NEXT key to select a display language. Press the MODE key to confirm.

8). Exit

After enter this menu, press "Exit" key to exit setting menu.

Record

After entering this menu, press the MODE key to start recording. Press the Play / Pause / Stop key to pause. Press the MODE key to stop recording. Press the Play / Pause / Stop key to play your recording. Press and hold the MODE key to exit.

Del

After entering this menu, press the PREV or NEXT key to Delete Music Files, Delete Voice Files or Exit. Press the MODE key to confirm. Press the PREV or NEXT key to select the files you want to delete. Press the VOL+ or VOL- key to choose yes or no, then press the Play / Pause / Stop key to delete the file. Press and hold the Play / Pause / Stop key to exit.

About

After entering this menu, press the MODE key, the LCD will display the version and attribute of the player. Press the MODE key to exit.

Exit

After entering this menu, press the MODE key to exit.

7. Upload and download from computer

1) Connect the mp3 player to your PC using the cable provided. Connect the cable to the mp3 player first, then connect to the PC port.

2) If the connection is successful, the LCD screen will display the word "ready."

3) Upload or download mp3/WMA files

If you want to disconnect the mp3 player, double-click the "Safely remove hardware" icon on the bottom right hand side of your screen. Select the device you want to unplug, then click Stop. When Windows notifies you that it is safe to do so, unplug the device from your computer. Disconnect the cable from your PC port first, then remove the cable from the device. Improper operation may cause the program to stop or fail.

Warning

Please format this unit by FAT! Do not format by FAT32.

Because the internal memory takes up some space, the actual memory may be less than 128MB.

The toy is not intended for children under 3 years old.

Please retain this information for future reference.

Note

Installation disc for systems below Windows 98