




Battery Powered Steam Locomotive

3 years +

⚠ WARNING
CHOKING HAZARD - small parts
Not suitable for children
under 3 years

INSTRUCTIONS

1. Number of battery required 1 x AAA (MN2400, LR03)
2. Remove small locking screw and battery cover.
3. Remove used batteries.
4. Insert new batteries ensuring '+' positive pole of batteries are placed as markings shown.
5. Replace the battery cover and screw.

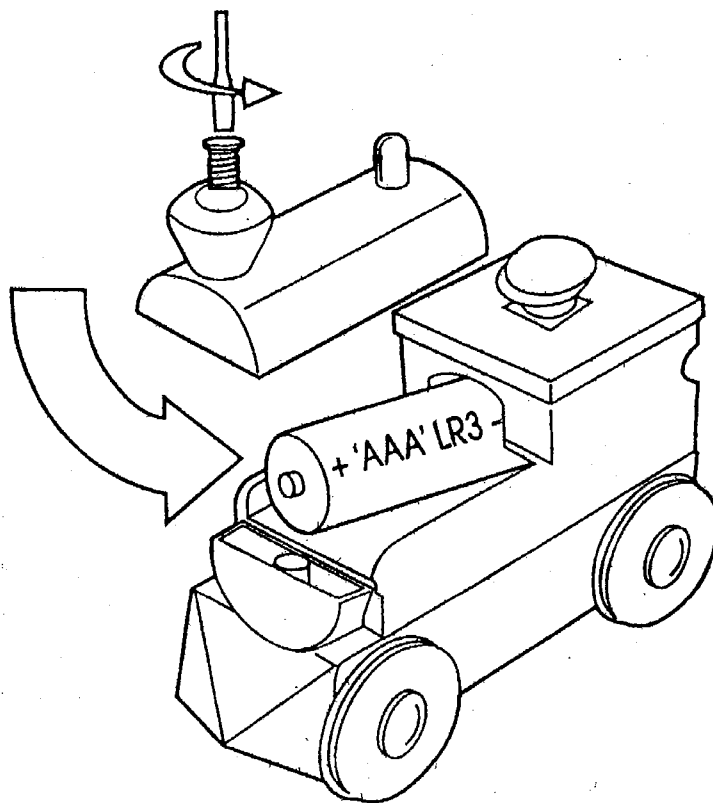

SKU: 105847

Early Learning Centre® Swindon SN3 4TJ England.

