


For your record!

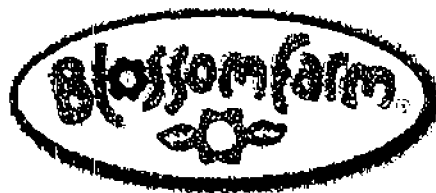


# Door Baby Bouncer

**INSTRUCTIONS  
IMPORTANT  
KEEP FOR FUTURE  
REFERENCE**

**PLEASE TAKE THE TIME TO READ  
THESE INSTRUCTIONS CAREFULLY.**

**THE DOOR BABY BOUNCER IS  
SUITABLE FOR BABIES FROM THREE  
MONTHS (OR WHEN THE BABY CAN  
SUPPORT IT'S OWN HEAD) AND  
UNTIL THEY START TO WALK (OR A  
MAXIMUM WEIGHT OF  
12 KGS OR 26.46 LBS)**


1. Padded seat with straps.
2. Spring loaded tube.
3. Hanger.
4. Spring loaded clamp
5. Height adjustment strap.

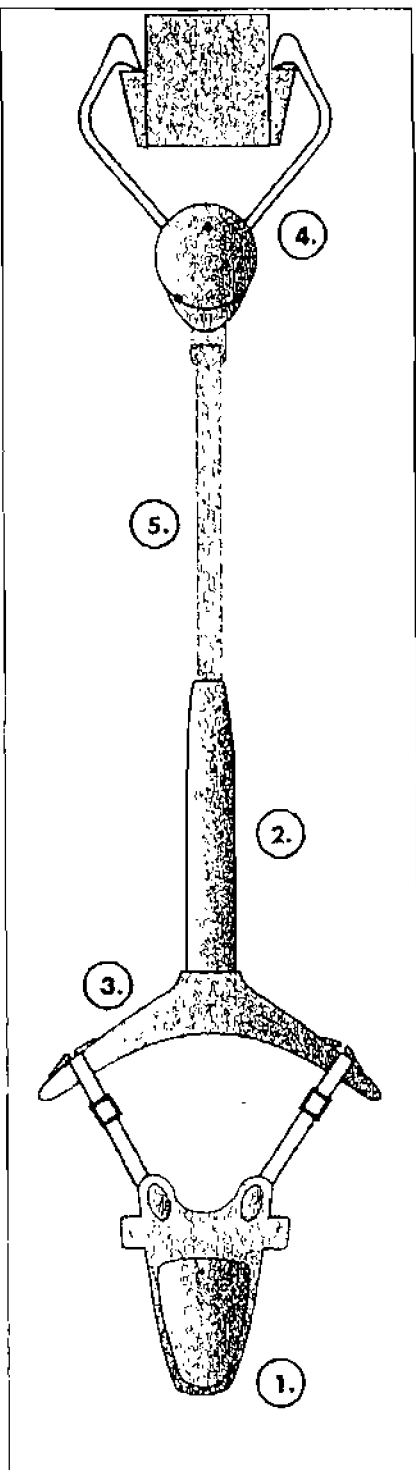

**PLEASE TAKE THE TIME TO READ THESE INSTRUCTIONS CAREFULLY.**


**RECOMMEND THAT YOUR BABY SHOULD ONLY BE IN THE BOUNCER FOR A MAXIMUM OF 20 MINUTES AT A TIME.**

- Inspect your Bouncer regularly
- To avoid potential injury you should inspect the bouncer each time you use it.
- Never leave your child unattended.
- Do not use the baby bouncer as a swing.
- Ensure the baby bouncer is positioned centrally in the doorway.
- Ensure your baby is always correctly and safely positioned in the bouncer seat.
- Be certain the clamp is securely fastened to the doorway before each use.
- Check doorways have strong, secure door frames.
- Do not allow your baby to sleep in the bouncer.
- Do not leave your baby in the bouncer for longer than 20 minutes at one time.
- Always remove the bouncer from the doorway when it is not in use to prevent entanglement in the straps.
- Do not allow other children to tamper with the bouncer when in use.

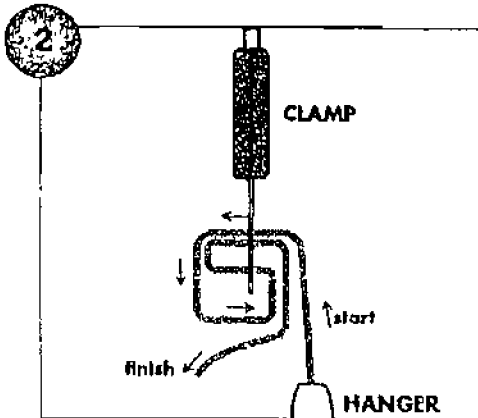

**Attach the strap from the top of the spring loaded tube on to the bottom of the clamp as shown in the diagram.**


The strap length will need to be adjusted once the bouncer has been installed in your doorway, with your baby supported. (You need to adjust the strap up and down as shown, until your babies' toes just touch the floor.)

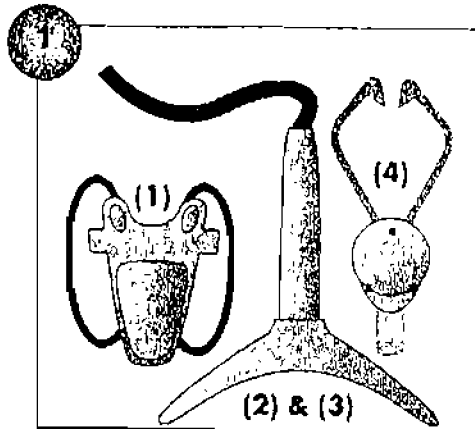

Check that you have all of the contents, there should be a padded seat with straps (1), the spring loaded tube (2), a plastic hanging section (3) and a spring loaded clamp (4).

We recommend you wash the seat before it's first use.

Attach 2 & 3 together as shown in "Hanger Assembly" **Ensure that they have clicked firmly together.**

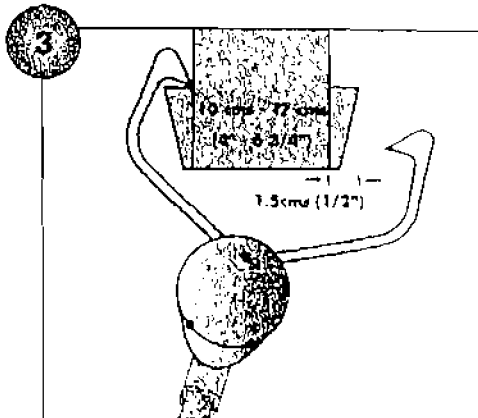


This bouncer has been designed to be used in an **interior door way only**. The wall must be at least 10 cms (4") thick and no more than 17 cms (6 3/4"). The Door frame must have a permanent secure architrave with a flat strong section at the top at least 1.5 cms (1/2") wide. Attach the clamp to the door frame as shown, by opening the clamp arms and hooking them over the door frame.

**WARNING: Ensure the door cannot close on the baby bouncer.**



Place clo  
To avoid following in

- Pull down the hanger, strap or the bouncer
- Always good contact any

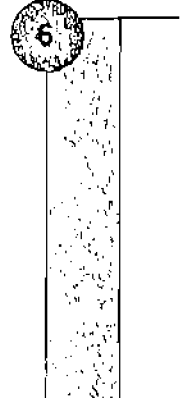


Secure your baby's velcro straps, buckle. Adjust

Please ensure that you are buckled to the hanger

100 mm above




contents,  
with straps  
of plastic  
g loaded  
at core  
own in  
at they  
ther.

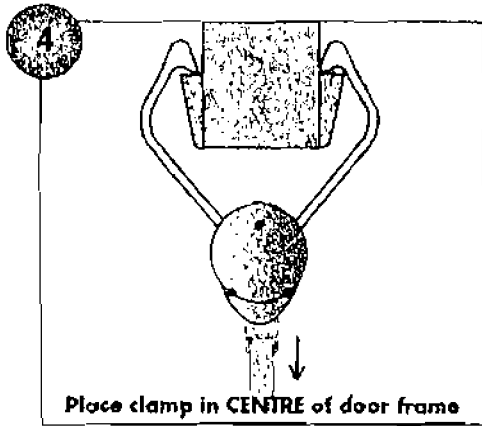

Place clamp in CENTRE of door frame

To avoid potential injury refer to the following installation guidelines, each time you use the bouncer:

- Pull down firmly on the strap underneath the hanger, if there is any movement of the strap or the clamp you should not use the bouncer in that doorway.
- **Always ensure that the strap is in good condition, do not use if there is any damage or fraying.**

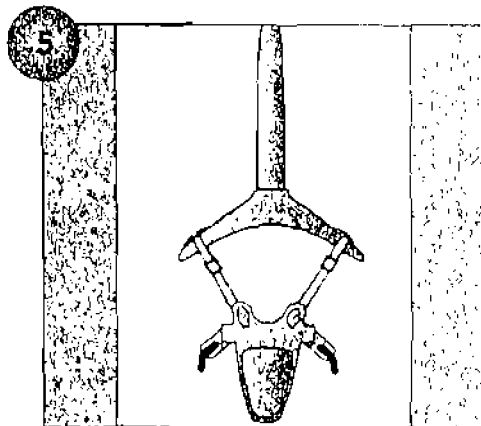


Once you are happy with the installation of the clamp and hanger, attach the seat to the hanger as shown above. The seat has a specially designed foam section at the bottom, to keep the seat open making it easy to position your baby comfortably in the seat, with a minimum amount of effort. There is a front and back to the seat, the seat has a dipped front and fastenings at the back.



ad in an  
all must be at  
re than 17  
st have a  
a flat strong  
1/2" wide.  
as shown, by  
ig them over  
not close







Secure your baby in the seat, by tightening the velcro straps, and then fastening the back buckle. Adjust the buckle straps to suit your baby.  
Please ensure the seat is a safe and snug-fit on your baby at all times.  
There are buckles on the straps that attach the seat to the hanger, position these buckles approximately 100 mm above your babies shoulders for comfort.

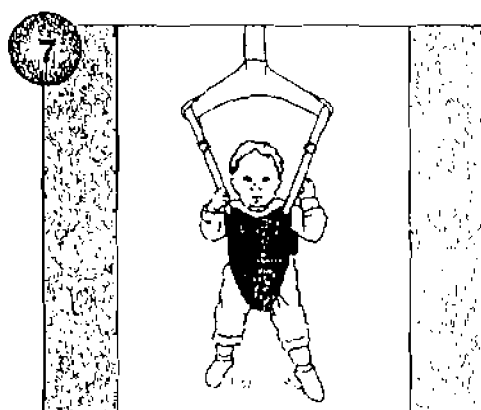

Once your baby is safely in the seat, you may have to adjust the main strap length, to allow your babies toes to just touch the floor. If only one adult is present, you may have to remove your baby from the seat. If two adults are present, one carefully lift the seat while the other adult adjusts the strap. You will have to make this adjustment with time, as your baby grows.  
**WARNING! NEVER LEAVE YOUR CHILD UNATTENDED**

## HANGER ASSEMBLY

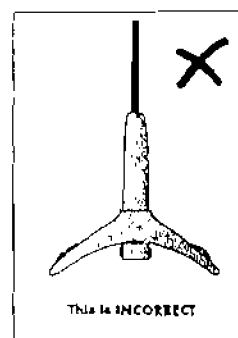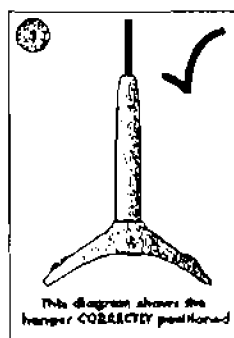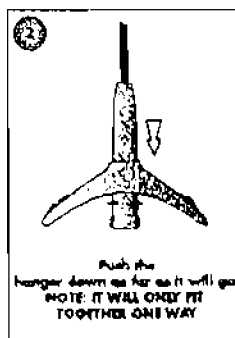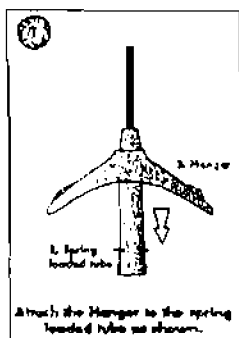

## CLEANING INSTRUCTIONS:

The seat on your bouncer is washable, remove the seat and machine wash on a low temperature (30°) and drip dry, do not tumble dry. **Wash separately. We recommend you wash the seat before you use it the first time.**

The plastic sections of the bouncer can be cleaned with a damp cloth. Do not use abrasive cleaners on the plastic sections.

Please take some time to read the following warnings to ensure safe operation of your product:

- NEVER LEAVE YOUR CHILD UNATTENDED!
- DO NOT USE THE BABY BOUNCER AS A SWING!
- ENSURE THE BABY BOUNCER IS POSITIONED CENTRALLY IN THE DOORFRAME
- ENSURE YOUR BABY IS ALWAYS CORRECTLY AND SAFELY POSITIONED IN THE BOUNCER SEAT
- BE CERTAIN THE CLAMP IS SECURELY FASTENED TO THE DOOR WAY BEFORE EACH USE
  - ONLY USE DOORWAYS WITH STRONG SECURE DOOR FRAMES
  - DO NOT ALLOW YOUR BABY TO SLEEP IN THE BOUNCER
  - DO NOT USE ANY SPARE PARTS ON THE BOUNCER
- ALWAYS REMOVE THE BOUNCER FROM THE DOORWAY WHEN IT IS NOT IN USE TO PREVENT ENTANGLEMENT IN THE STRAPS
- DO NOT ALLOW OTHER CHILDREN TO TAMPER WITH THE BOUNCER WHEN IN USE.

SKU: 100207  
 Early Learning Centre® Swindon SN3 4TJ England.  
 Customer Service Department 01793 443322



PLEASE TAKE THE TIME

