




dino adventure set

instructions

1110140805
Early Learning Centre®
Swindon SN3 4TJ England.

Customer Service Department
01793 443322

assembly

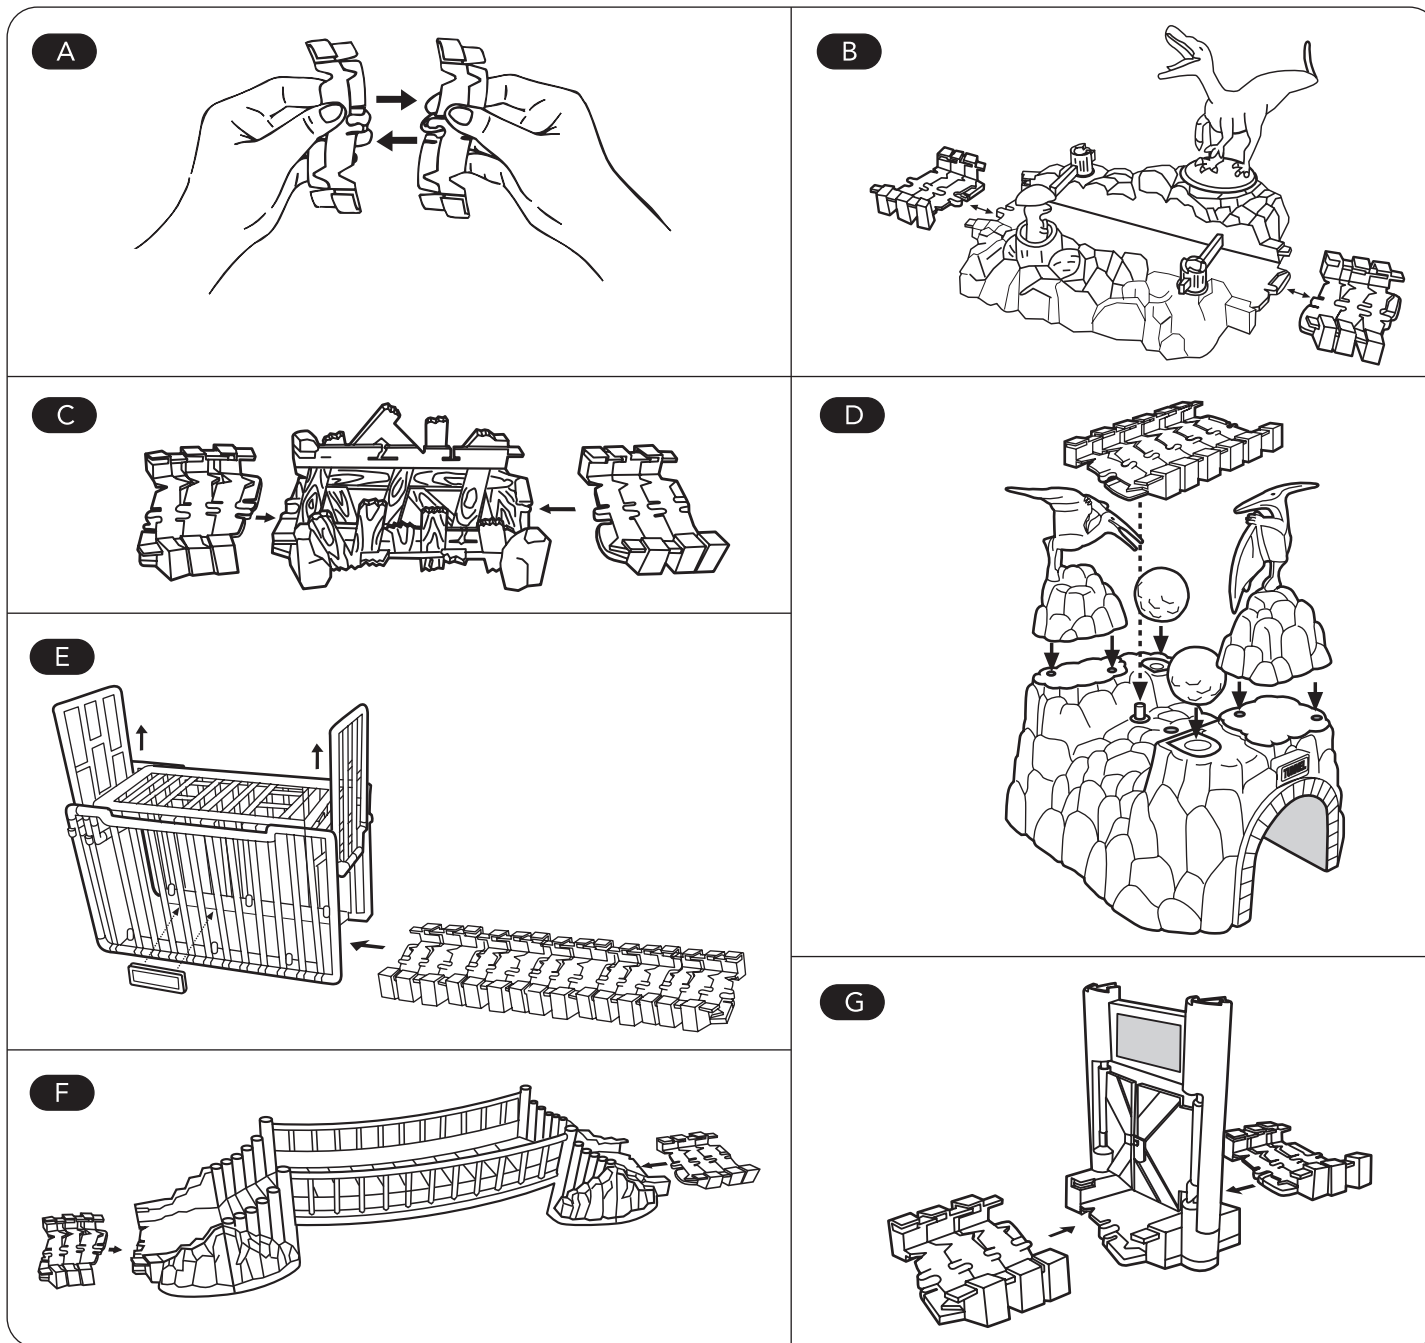

changing batteries

- How to replace batteries:
1. Remove battery cover from chassis by using a screwdriver (Fig A).
 2. Remove used batteries.
 3. Insert new batteries ensuring '+' positive pole of batteries are placed as markings shown (Fig B).
 4. Replace battery cover.

