

SKU no. <b>113621</b>		<b>Initial Check</b>		<b>Final Check</b>		<b>Final Approval</b>		<b>Sign-off film &amp; wet proof</b>	
Name electronic disco dude		Packaging Design		Product Manager		Chas/Paul (FE product)		Packaging Design (FE product)	
Buying team <b>making music</b>		Date	Initial	Date	Initial	Date	Initial	Date	Initial
Designer <b>James</b>		Copywriter		Product Acquisition		Buyer (UK product)		Buyer (UK product)	
Date created <b>15.3.06</b>		Date	Initial	Date	Initial	Date	Initial	Date	Initial
		QA		QA					
		Date	Initial	Date	Initial				
		Packaging Design		Packaging Design					
		Date	Initial	Date	Initial				

AW06




# Disco dude

## instructions

113621 0306  
Early Learning Centre®  
Swindon SN3 4TJ England.


**Customer Service Department**  
**01793 443322**

### features

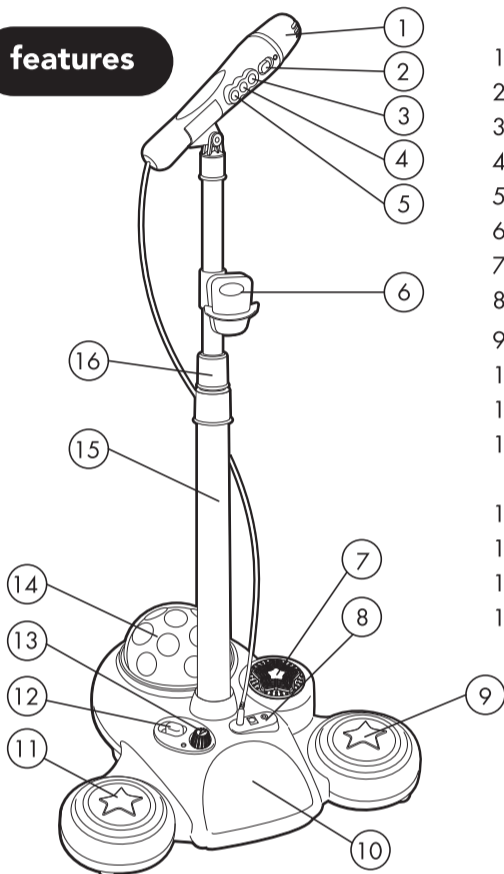

1. Microphone
2. Microphone power on/off
3. Chanting button
4. Claps button
5. Boos button
6. Music book clip
7. Speaker
8. Mic jack/DC jack/Aux in
9. Boos pedal
10. Claps pedal
11. Chanting pedal
12. Disco ball power switch (On/Off/Flash)
13. Volume on/off
14. Disco ball
15. Adjustable microphone stand
16. Height adjusting collar

### assembly

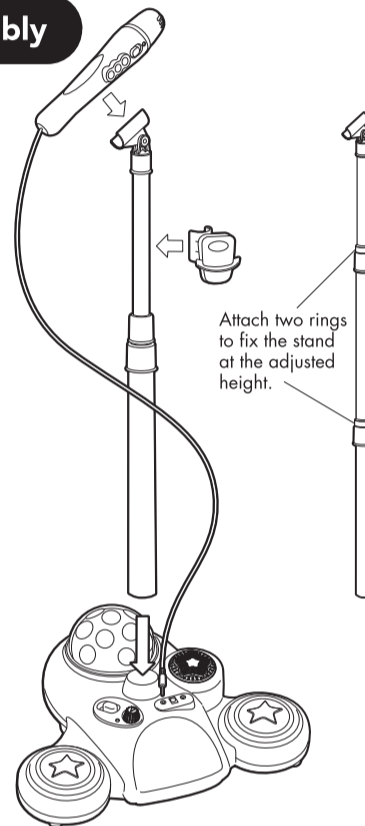

#### LIGHT BULB REQUIREMENTS

Required light bulb 9V/750mA, max 6.75W.

**Caution:** Light bulb is hot!

**Warning:** Using a bulb that does not meet these specifications might damage the rotating light.

Make sure that volume switch and disco ball power switch are set to **OFF**, the toy is disconnected from the transformer and the light bulb has cooled down when replacing light bulb.

#### MAINS TRANSFORMER OPERATION

Use an external transformer (not included) with DC  $\overline{\text{---}}$  9V max, 1200 mA  $\oplus \ominus \ominus$  terminals. Press the plug into DC jack  $\oplus \ominus \ominus$ . Any safety isolating transformer used with the unit has to be regularly examined for damage to the cord, plug, enclosure and other part, and that in the event of such damage, the toy must not be used with this transformer until the damage has been repaired.

- the toy is not intended for children under 3 years old,
- the toy must only be used with the recommended transformer,
- the transformer is not a toy,
- toy liable to be cleaned with liquid are to be disconnected from the transformer before cleaning.

#### HOW TO REPLACE LIGHT BULB

**Light bulb should only be changed by an adult.**

1. Remove small locking screw at the back of the base of disco microphone to release the cover and take the bulb stand out carefully.
2. Unlock used light bulb and replace with the new one.
3. Replace the bulb stand and the cover then replace the screw.

