 



KEYBOARD AND STOOL

3 years +

Adult assembly required
WARNING
 CHOKING HAZARD - small parts & long cord
 Not suitable for children under 3 years

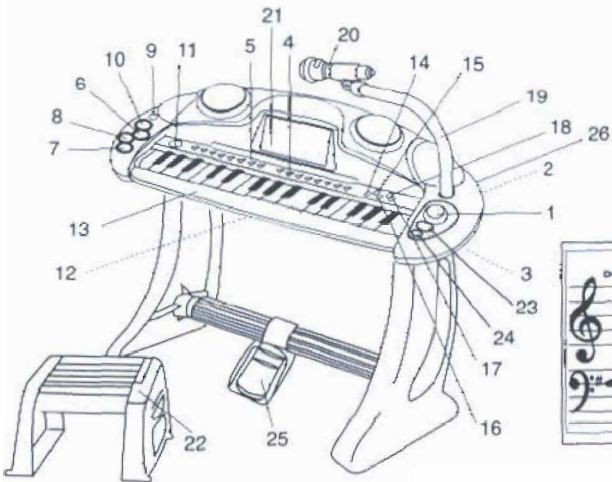

 21. LCD Display

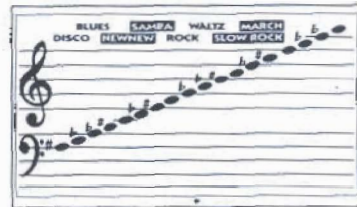

1. Volume knob (MAX/OFF)
2. Mic Socket
3. Battery Compartment (Rear side)
4. Rhythmic Selector (x8)
5. Musical Instrument Tones (x8)
6. Replay key
7. Demo key (8 Songs continued)
8. One Song Demo key
9. Stop key
10. Record key
11. Tempo Up/ Down Control key
12. Speaker(Rear side)
13. Keyboard

14. Low Tom select key
15. High Tom select key
16. Bass Drum select key
17. Cymbal select key
18. High-hat select key
19. Microphone holder
20. Microphone
21. LCD Display
22. Stool
23. One Key One Play button
24. Learning button
25. Sustain pedal
26. Sustain pedal socket

HOW TO REPLACE BATTERIES

1. Remove battery cover by pressing the clips and pulling the cover towards you.
2. Remove used batteries.
3. Insert new batteries ensuring '+' positive pole of batteries are placed as markings shown.
4. Replace the batteries cover.

- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Remove all the batteries when the toy is not in use for a long period.
- The packaging has to be kept since it contains important information.
- Rechargeable batteries are to be removed from the toy before being charged (if removable)
- Rechargeable batteries are only to be charged under adult supervision (if removable).

OPERATIONS:

1. START PLAYING

- Insert batteries in the battery compartment at the rear side.
- Rotate "VOLUME" knob clockwise and start playing.

2. PLAY KEYBOARD

Press one of the keys, the keyboard LED will light up and the LCD screen will help you distinguish each note of the scale by displaying the appropriate note of the scale as you play the actual note. Learn to compose your own music.

3. CHANGE ALL INSTRUMENT SOUND

Select one of eight instrument keys: PIANO, ORGAN, VIOLIN, TRUMPET, MANDOLIN, BELL, MUSIC BOX, and GUITAR. Press the key to play the sound effect.

4. Rhythm

- There are 8 different rhythms.
- You can also play keyboard while rhythm is playing.
- To stop rhythm, press the Stop key.
- To adjust the speed of the rhythm, press Tempo up/down control key.

5. PLAY DEMO SONG

- Press 1 SONG key to listen one demo song only. To listen next song, Press it again.
- Press the FULL key to play and listen all demo song.
- Press stop key to stop the demo song.
- Press TEMPO UP/DOWN control key to adjust demo song speed.

6. PLAY DRUM SOUND

- For drum sounds, press any of the following keys:
 - Low Tom select key
 - High Tom select key
 - Bass Drum sound select key
 - Cymbal select key
 - High-hat select key

7. RECORD

- Press RECORD button to start recording.
- Press REPLAY button to play back what you have recorded.

8. PLAY SING-A-LONG

- Plug the microphone into the microphone jack for Sing-A-Long.

9. ONE KEY ONE PLAY

- Press ONE KEY ONE PLAY button, Press 1 SONG button and play any one of the keys, this will run the keytone of the selected demo song with LED flashing.

10. PLAY LEARNING

- Press LEARNING button to learn how to play the demo song. Press 1 SONG button and then press the LED flashing keys for learning.

11. SUSTAIN SOUND

- Plug the jack of the sustain pedal into the sustain pedal socket.
- Step on the sustain pedal to have sustain effects while playing the keyboard.

SKU: 107651

Early Learning Centre@ Swindon SN3 4TJ England.
 Customer Service Department 01793 443322

The toy is not intended for children under 3 years old.
 Please retain this information for future reference.



 
KEYBOARD AND STOOL

3 years +

Adult assembly required

WARNING

CHOKING HAZARD - small parts & long cord
Not suitable for children under 3 years

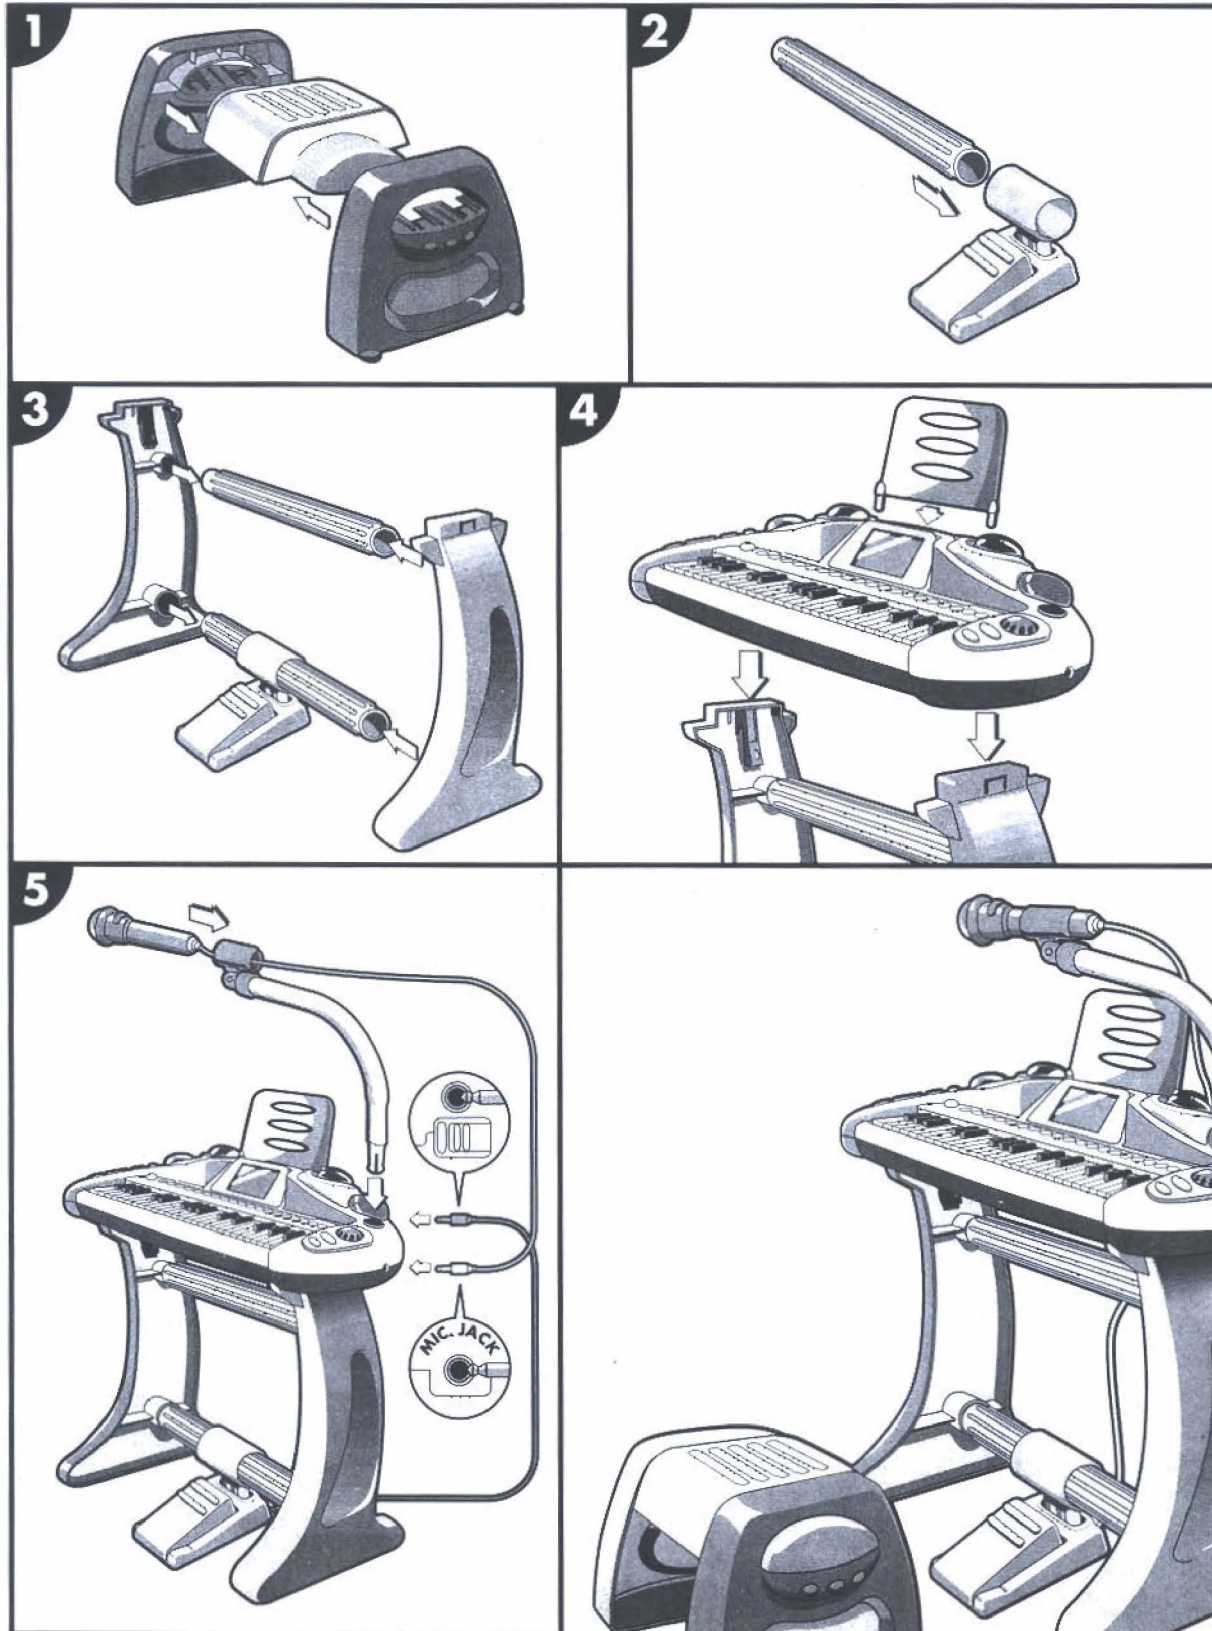

SKU: 107651

Early Learning Centre@ Swindon SN3 4TJ England.
Customer Service Department 01793 443322

