

musical mobile


assembly instructions

0 months +

Adult assembly required

⚠WARNING

Possible entanglement injury. Keep out of baby's reach. Remove mobile from crib or playpen when baby begins to push up on hands and knees.

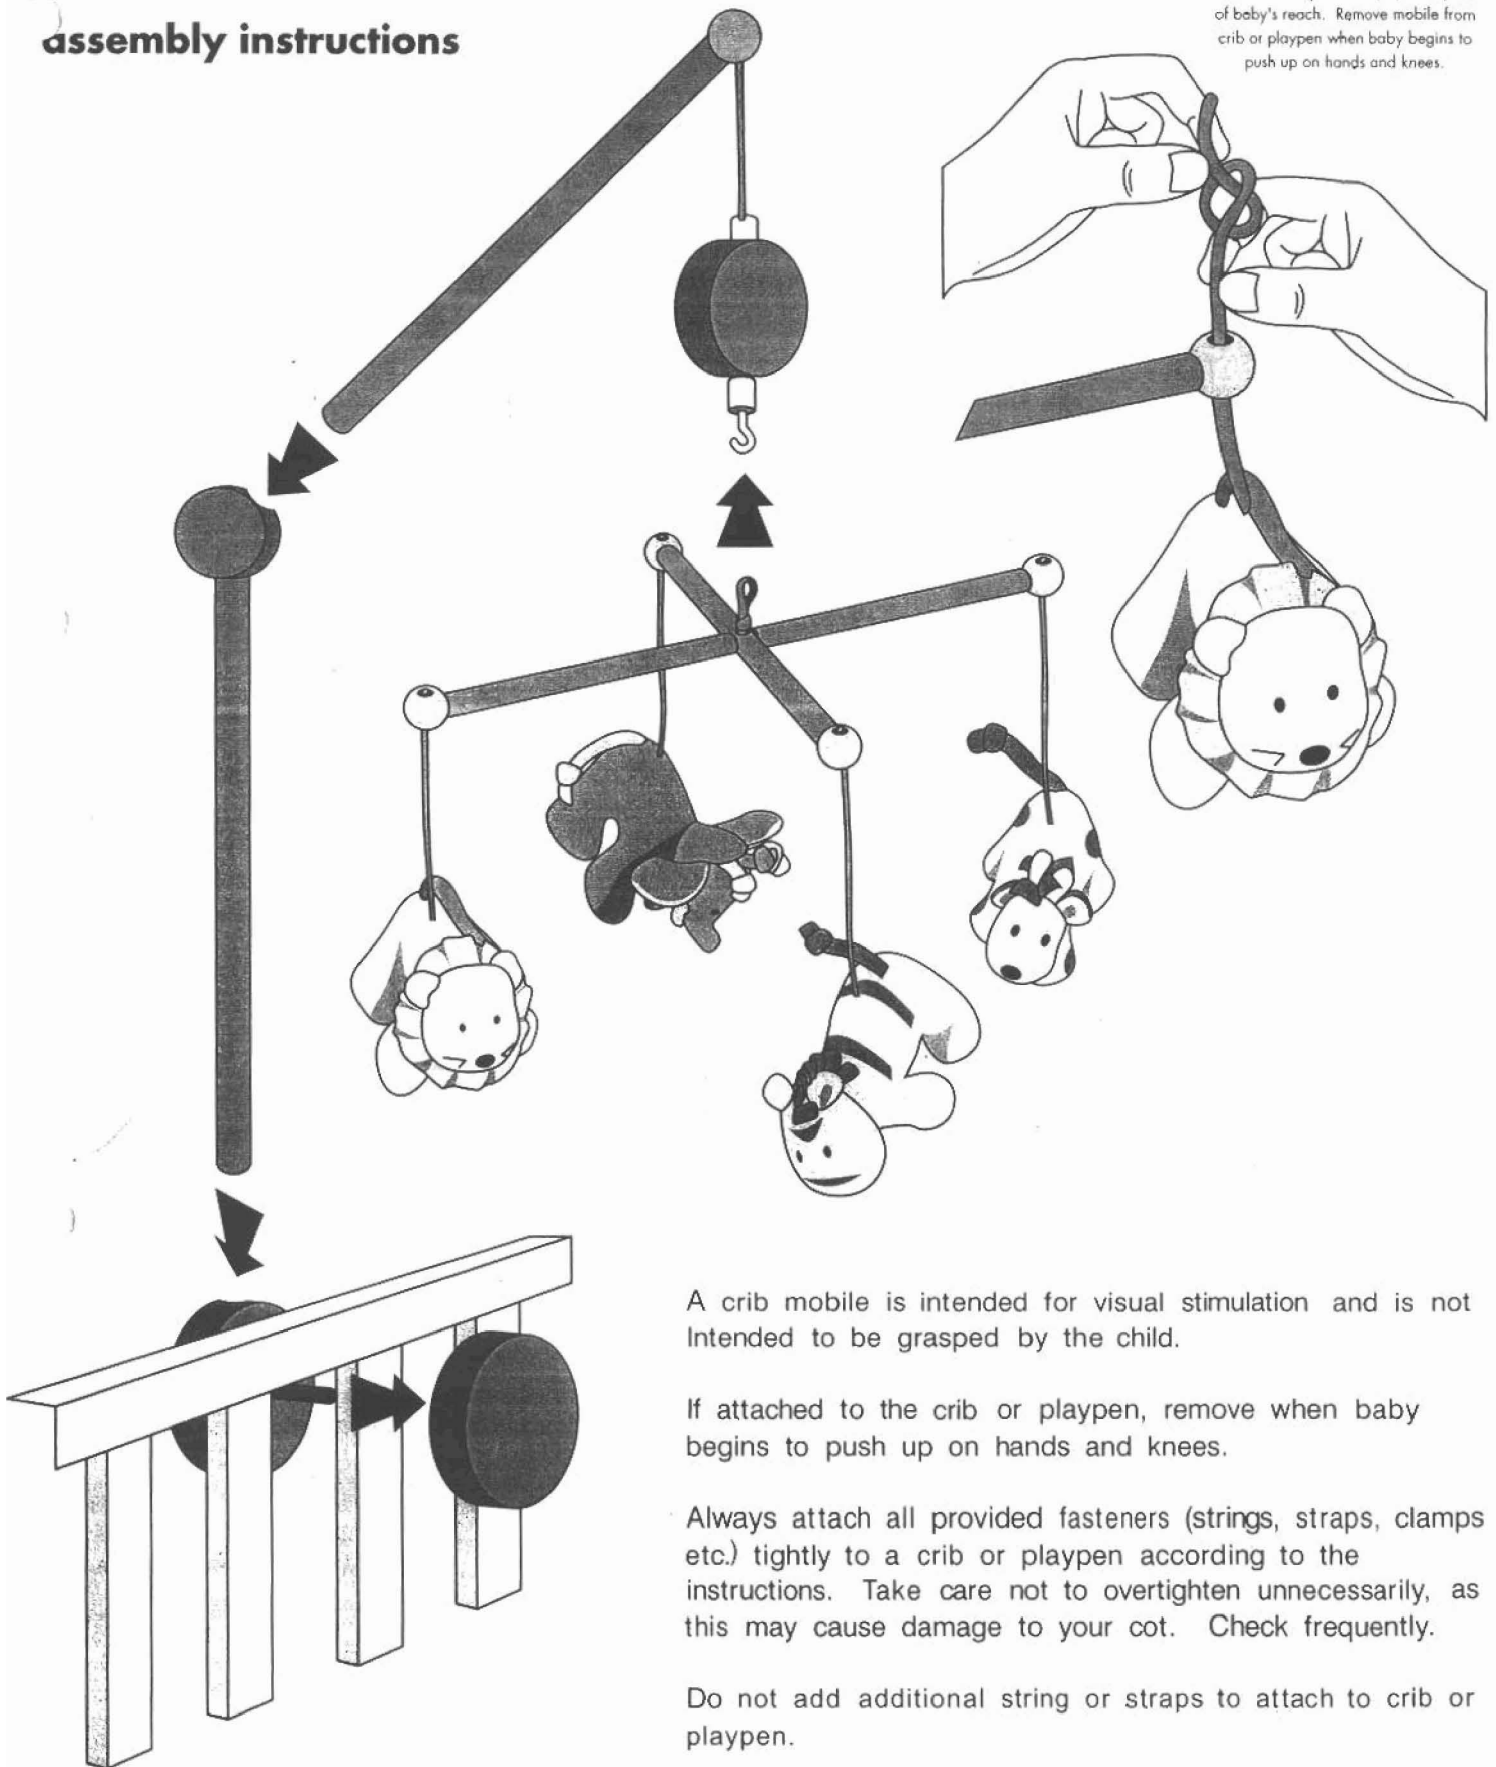

A crib mobile is intended for visual stimulation and is not intended to be grasped by the child.

If attached to the crib or playpen, remove when baby begins to push up on hands and knees.

Always attach all provided fasteners (strings, straps, clamps etc.) tightly to a crib or playpen according to the instructions. Take care not to overtighten unnecessarily, as this may cause damage to your cot. Check frequently.

Do not add additional string or straps to attach to crib or playpen.

WARNING: Keep away from fire.

SKU: 102810

Early Learning Centre © Swindon SN3 4TJ England
Customer Service Department 01793 443322

