



furniture set

assembly instructions


118025/118026 0408

Early Learning Centre®
Swindon SN3 4TJ England


Customer Service Department
0871 231 3511

contents - table


A x1

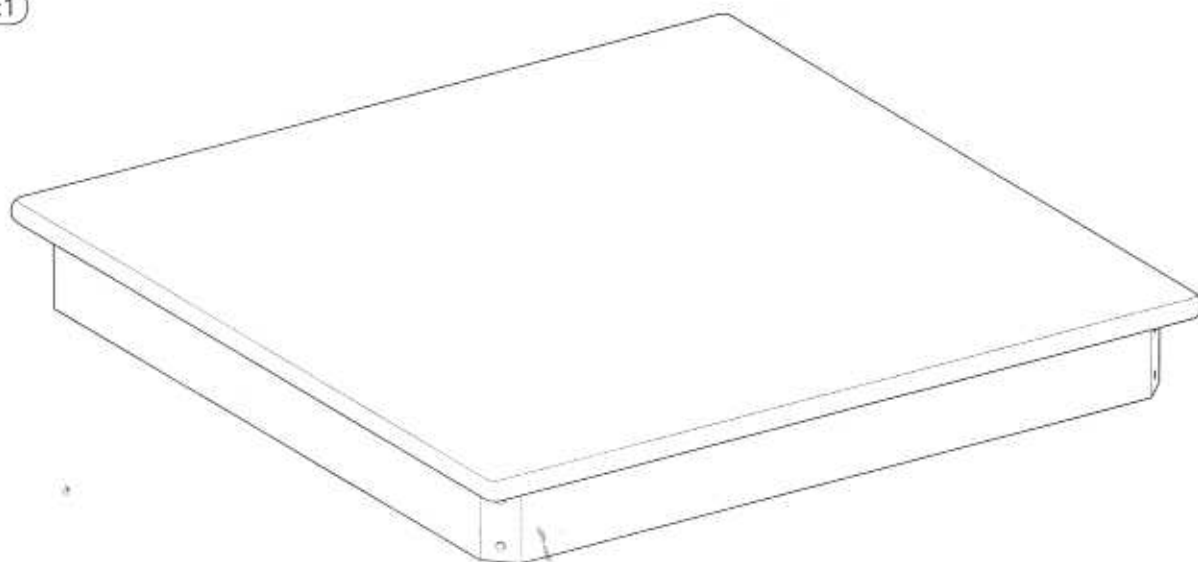

B x4

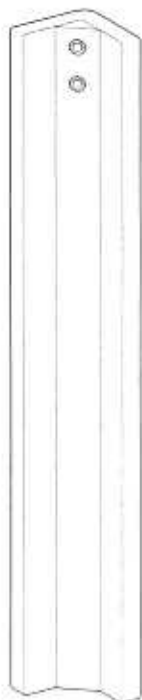

C x1

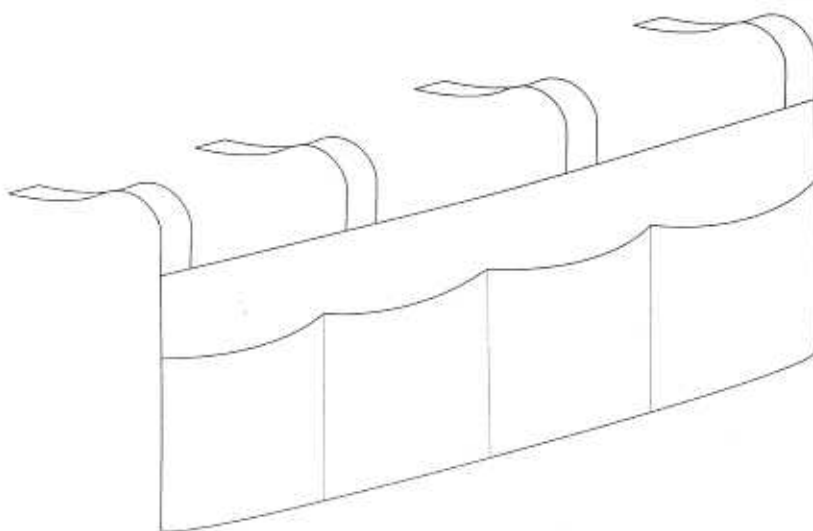


D x1



allen key wrench

E x8

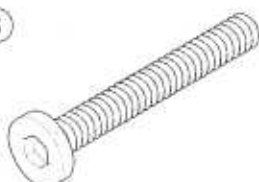


F x8




assembly - table

1

note: assemble furniture on a soft surface such as a carpet or rug to avoid scratching

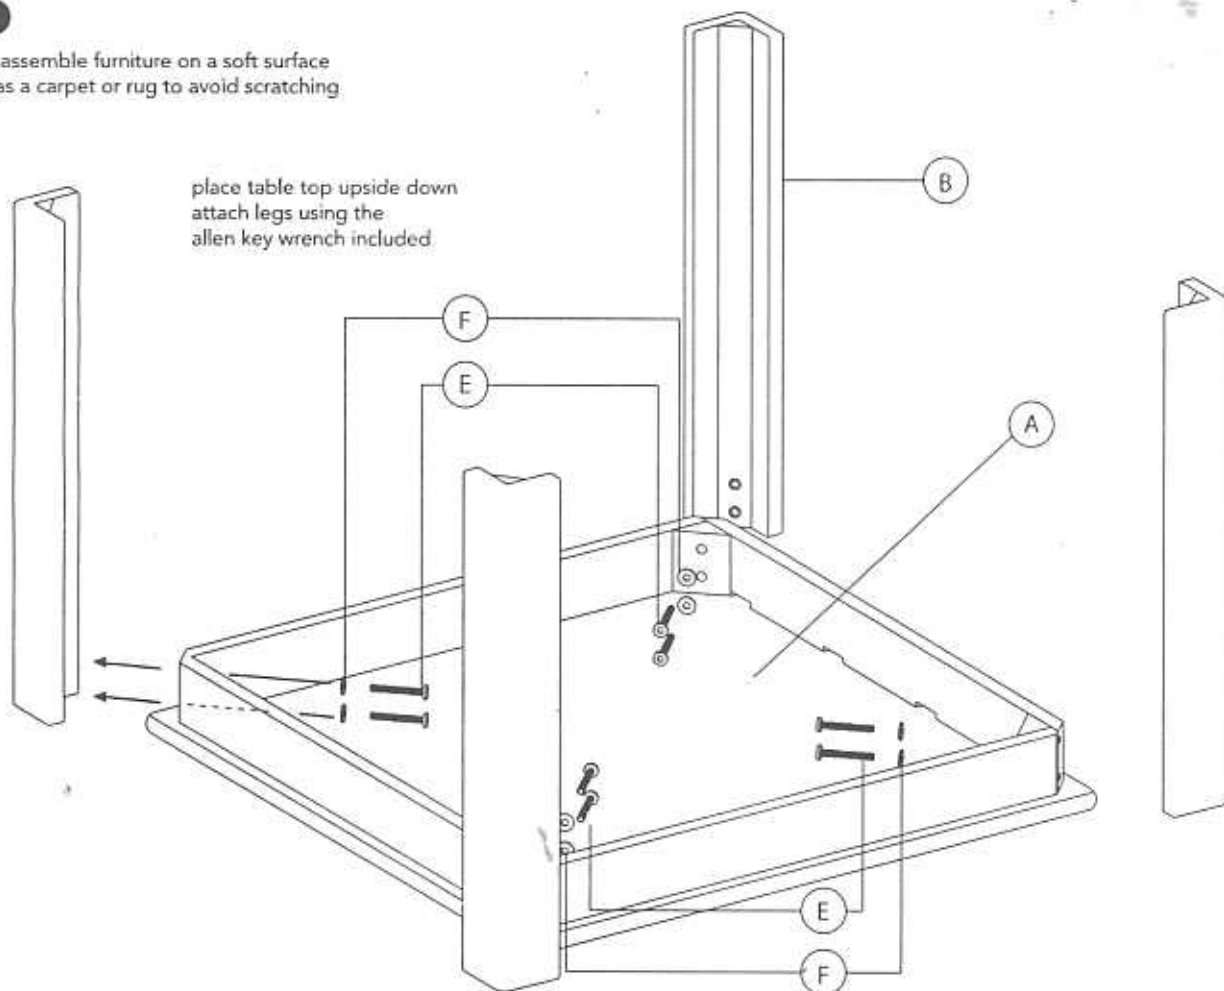

2

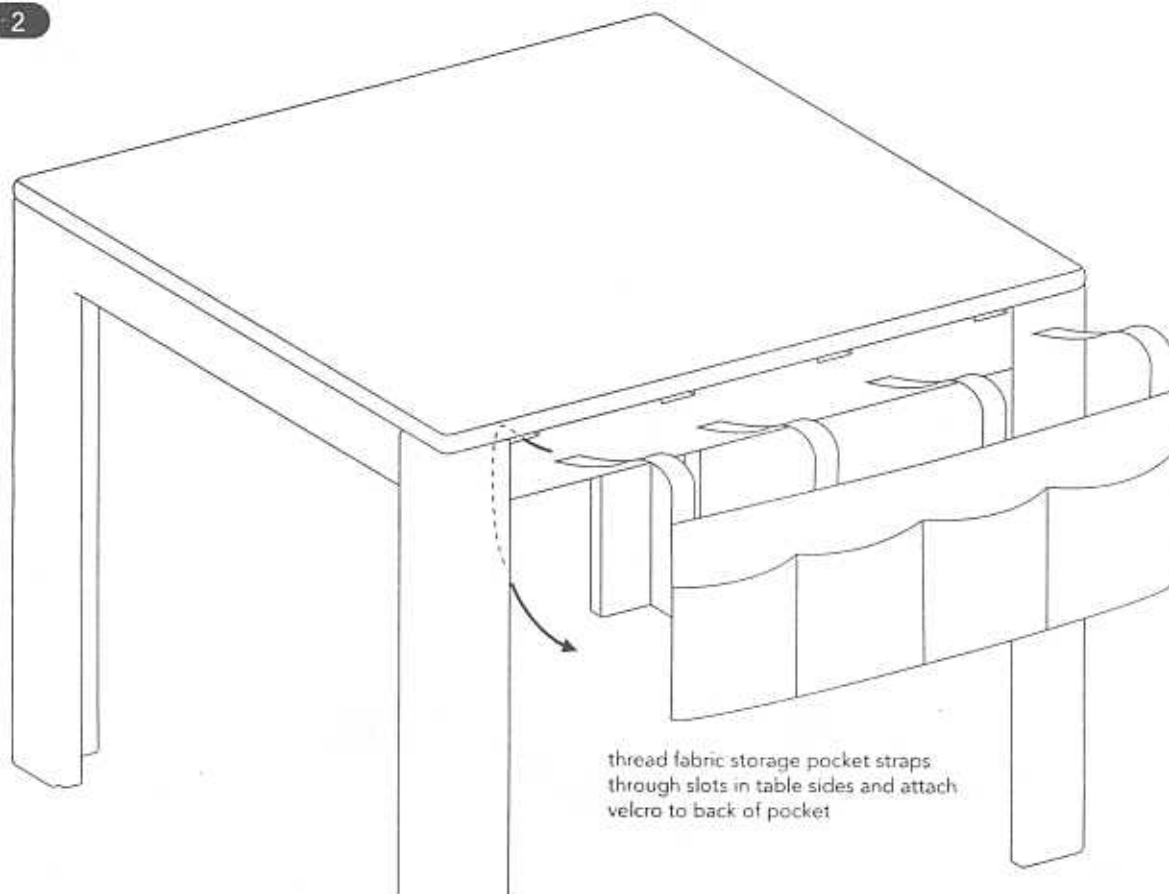


contents - chairs

A x8




B x2

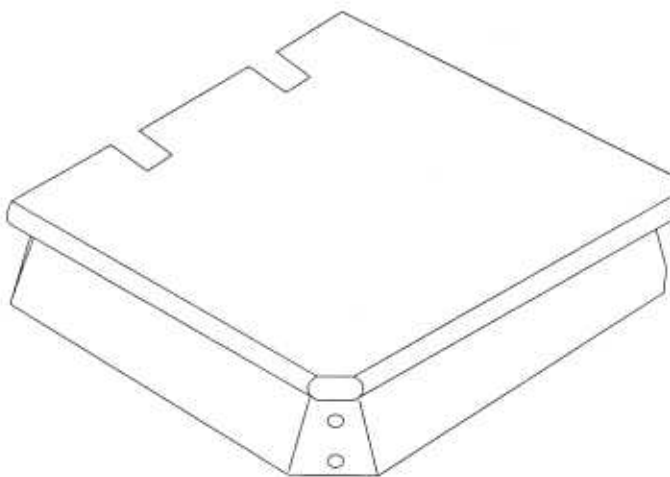

C x4




D x2

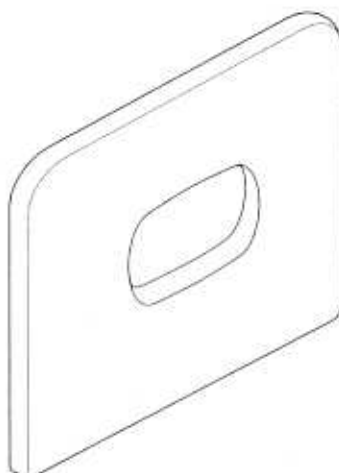

E x8




F x20

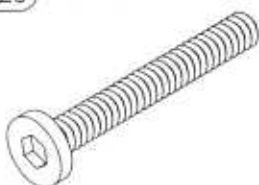

G x8




H x4

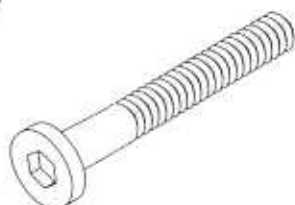

I x1

allen key wrench

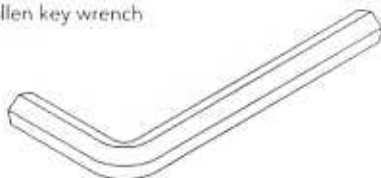

J x1


allen key wrench



assembly - chairs

1

note: assemble furniture on a soft surface such as a carpet or rug to avoid scratching

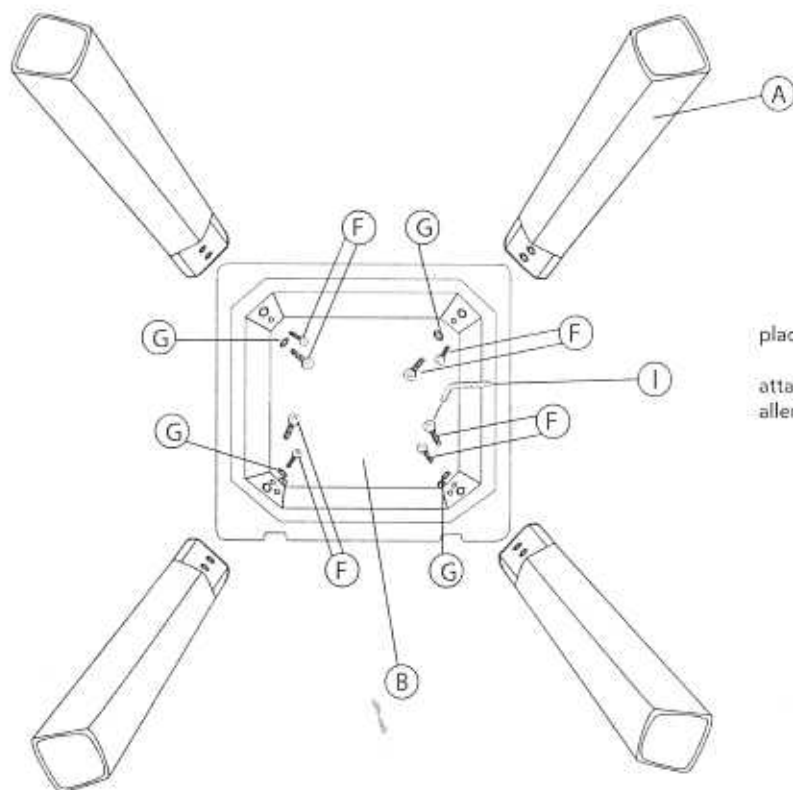

place seat upside down

attach front legs using the allen key wrench included

2

turn assembled seat and front legs on side

attach chair back using the allen key wrench included

