 
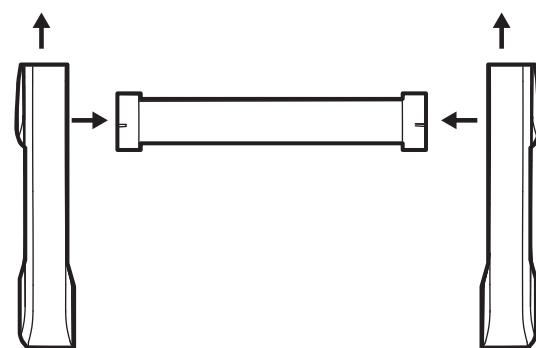 
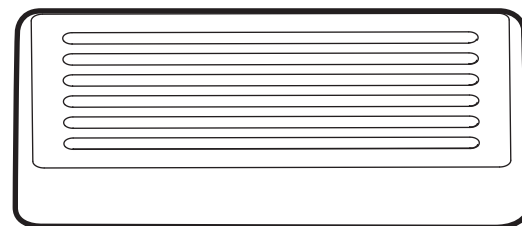 
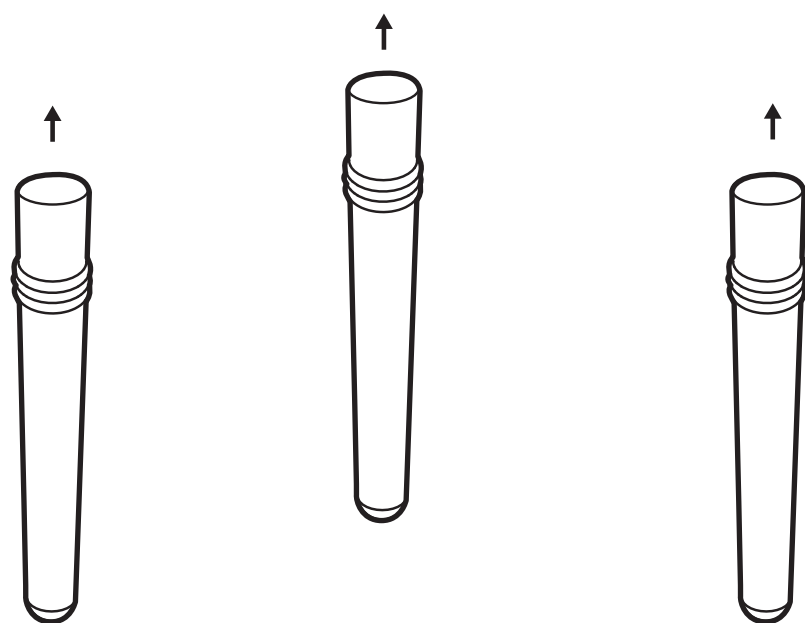 


assembly

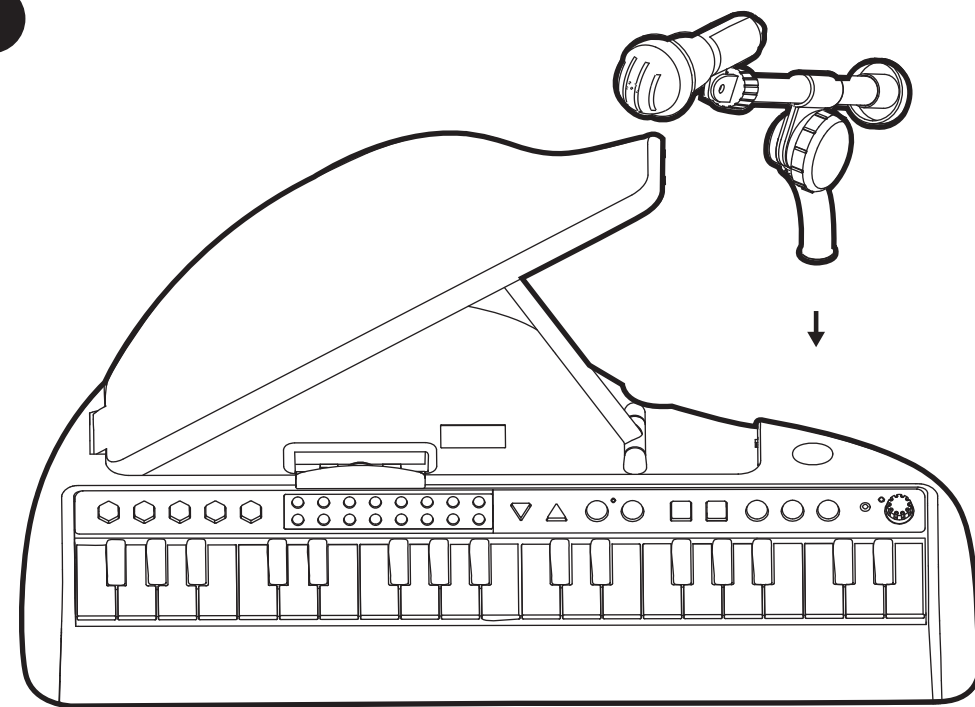 


grand piano
instructions

112977 0306
Early Learning Centre®
Swindon SN3 4TJ England.

Customer Service Department
01793 443322

features

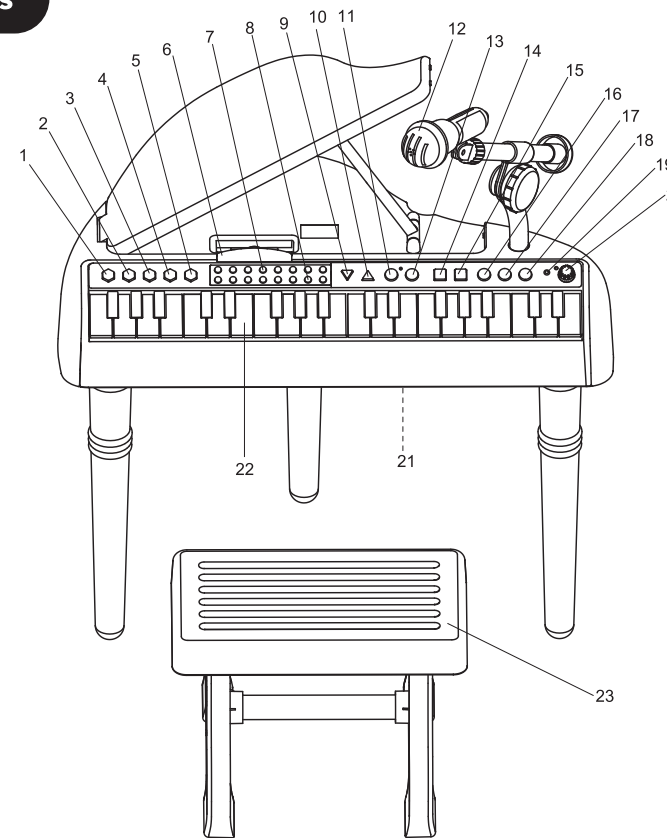

1. LOW TOM button
2. HI TOM button
3. BASS DRUM button
4. CYMBAL button
5. HI HAT button
6. Music stand
7. Rhythm select button (x8)
8. Instrument select button (x8)
9. Tempo down button
10. Tempo up button
11. Record button
12. Microphone
13. Replay button
14. One key one note button
15. Learn button
16. Demo 1 song button
17. Demo full button
18. Stop button
19. MIC jack
20. Volume control knob, ON/OFF switch
21. Battery compartment
22. Keyboard
23. Stool

GENERAL OPERATION

TO START PLAYING

- Insert batteries in the battery compartment at the rear side.
- Slide the power On/Off switch to the "On" position and start playing.

KEYBOARD

The unit has 36 keys.

TO SELECT INSTRUMENT SOUND

Press the instrument select buttons to select one of 8 instruments: PIANO, ORGAN, VIOLIN, TRUMPET, MANDOLIN, BELL, MUSIC BOX and GUITAR.

TO SELECT RHYTHM

Press the rhythm select buttons to select one of 8 background rhythms: SLOW ROCK, ROCK, NEWNEW, DISCO, MARCH, WALTZ, SAMBA and BLUES.

TO PLAY DRUM SOUND

Press the drum sound buttons to select 5 different drum sounds: LOW TOM, HI TOM, BASS DRUM, CYMBAL and HI HAT.

TO PLAY DEMO SONG

Press the DEMO 1 SONG button to play a demo song. Press the button again to play the next demo song. Press the DEMO FULL button to play all demo songs. Press the stop button to stop all demo songs.

TO PLAY RECORD AND REPLAY

When you press the RECORD button, the LED will light up and you can start recording. Press the REPLAY key to play back the recorded melody. To record a new song, press the stop key and press the RECORD button again. Records instrument sounds only.

TO PLAY ONE KEY ONE NOTE

Press the 1 SONG key to select the demo song you want to play. Then press the ONE KEY ONE NOTE button and press any of the keys to continue play at your own pace.

TO LEARN

Press the 1 SONG Key to select the demo song you want to play. Then press the LEARN button and the light-up keys will flash one by one to show you how to play the demo song.

TEMPO UP/DOWN

Press the TEMPO UP/DOWN key to speed up or slow down the pace of the music or rhythm.

VOLUME CONTROL

Press the volume control button to control the sound level of the unit.

In the unlikely event of this toy malfunctioning, reset the toy by turning off and on again.

