


# Caring Corners

Learning  
Curve

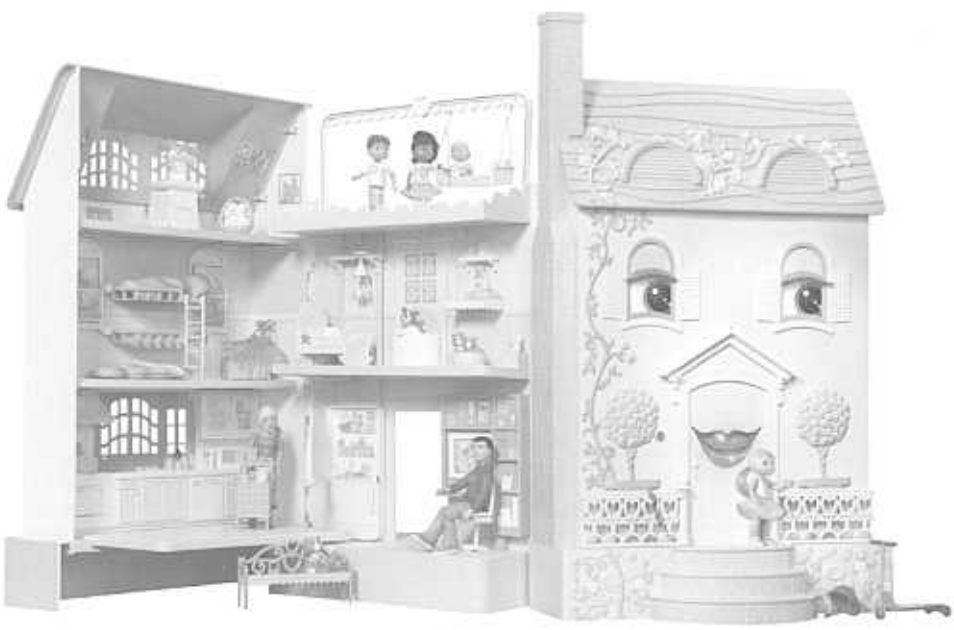

## Mrs. Goodbee™ TALKING DOLLHOUSE

[www.CaringCorners.com](http://www.CaringCorners.com)

**WARNING:**  
CHOKING HAZARD—Small parts.  
Not for Children under 3 years.

See what moms are saying

visit [www.learningcurve.com](http://www.learningcurve.com)

Contents and colors may vary.  
Dollhouse and some figures/accessories sold separately.

**3+**  
LC66021

## Contents:



Doll House  
x 1



Chimney  
x 1



Window  
x 1



Dog  
x 1



Card Key  
x 1



Steps  
x 1



Swing  
x 1



Chair  
x 1



Baby  
x 1



Girl  
x 1



Parent Guide  
x 1



Label Sheet 1 x 1  
\*See page 4 & page 5  
for placement instruction




Label Sheet 2 x 1  
\*See page 4 & page 5  
for placement instruction



Label Sheet 3 x 1  
\*See page 4 & page 5  
for placement instruction

## Battery replacement diagrams:

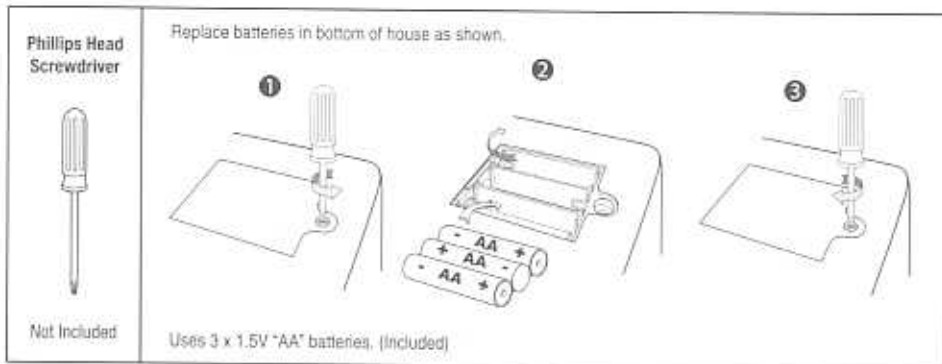

## Assembly and On/Off:



Slide chimney top down to snap into chimney base.



Snap window into window opening in back of house.



Snap steps into porch in front of house.




Hook swing into heart-shaped archway on playground on top of house.




The dollhouse can be played with the switch in the "ON" position for full audio phrases, songs, and sounds, or in the "OFF" position for no audio.

## Opens and Closes for Easy Storage:

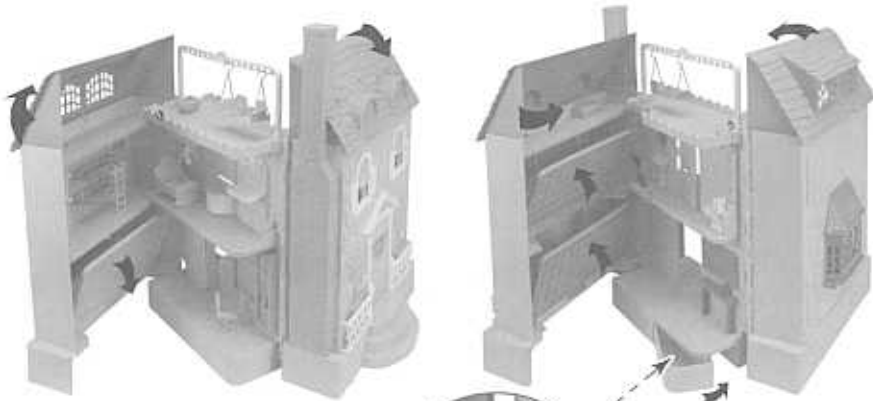

To open, grasp each side of house and lift right side a little first, then pull sides away from the middle section to expand into a 'Zig-Zag' shape. Once opened, you can lower Kitchen Floor and Bunk Beds on the Front Side, and Bedroom Floor and Living Room Floor on the Back Side.

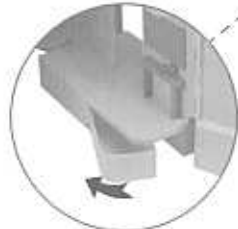

**Store dolls in this compartment.** Simply pull the outer corner away from the base to open.

**BE SURE TO RAISE FLOORS AND BUNK BEDS BEFORE CLOSING THE HOUSE.** Failure to do so could result in breakage.

# Audio Activation Points and Label Application:

Flip windows up to change the scene outside window.



Gently rock **G** cradle to activate sounds.



Open oven door to see what's cooking inside. Changes to view 3 different foods.

Door revolves and hamper opens.



Cabinets and dishwasher doors open.

Note: There are eight Audio Activation Points **A** through **H**, and sixty-six Labels **1** through **22** on pages 4 and 5.

Indicates Audio Activation Point.


To reset audio from the beginning, press down on lids to close eyes. Switch the unit off, then on. Press doorbell to re-open and re-activate sounds.

Press **A** doorbell and Mrs. Goodbee's eyes open, and she will speak. Additional presses will activate other phrases.


Open **B** refrigerator door to activate sounds.



Baby's changing table flips up.

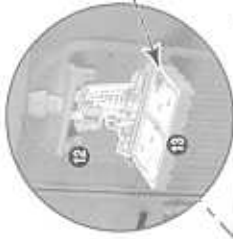

# Audio Activation Points and Label Application (continued):

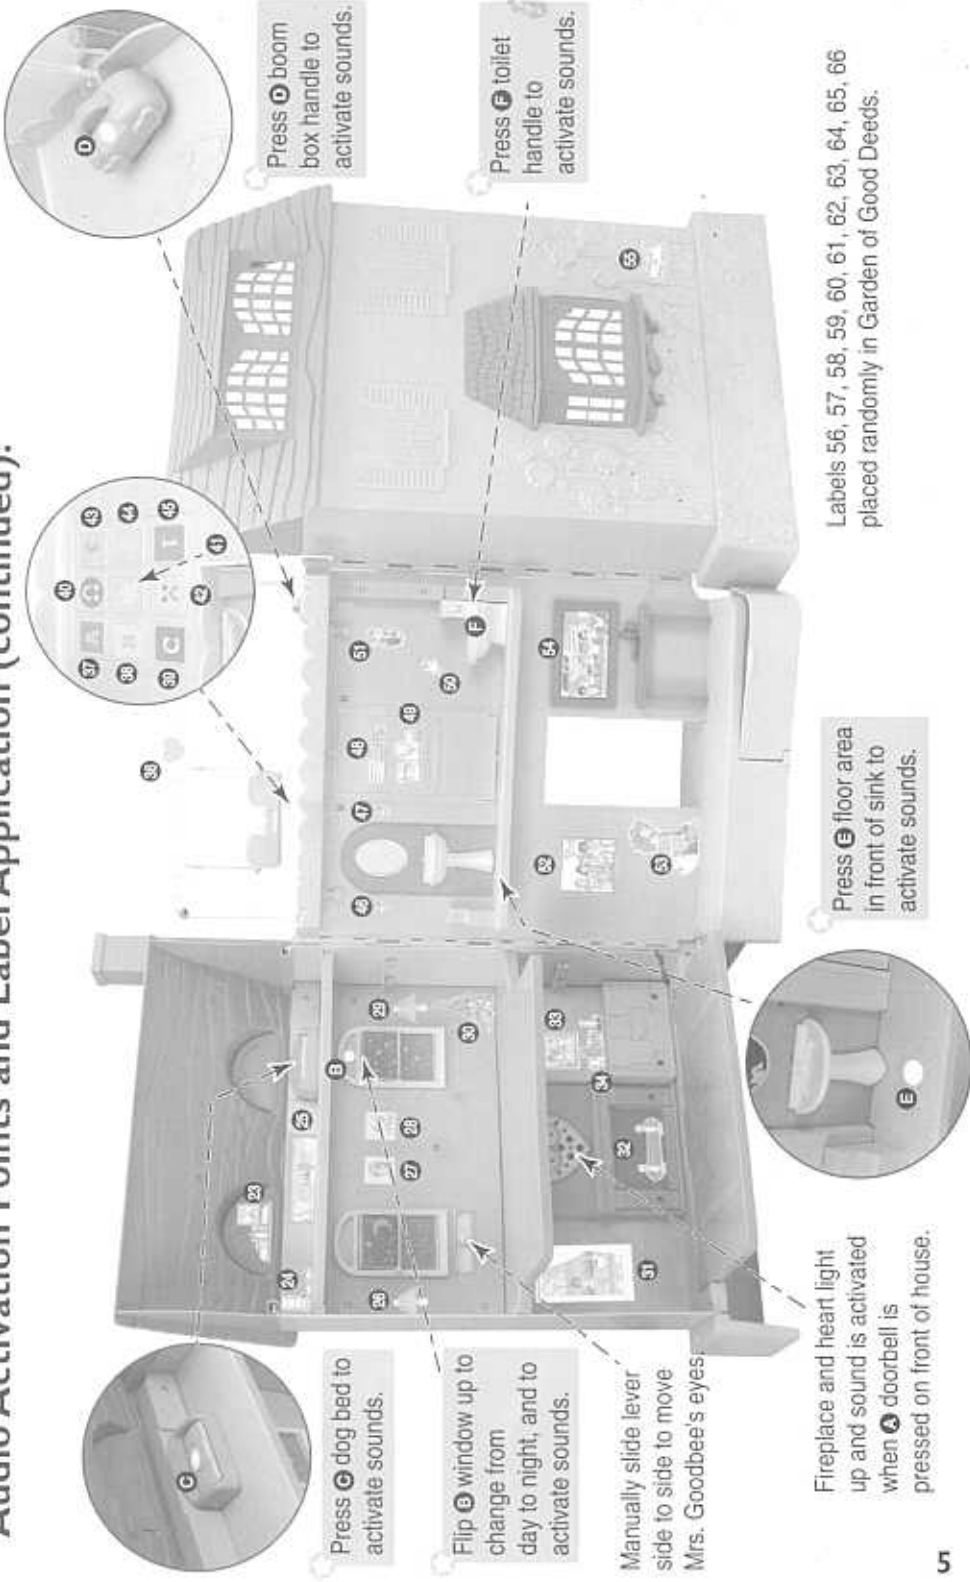

Labels 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66 placed randomly in Garden of Good Deeds.

## BATTERY SAFETY INFORMATION:

- Batteries should be installed and changed under adult supervision.
- Exhausted batteries are to be removed from the toy and disposed properly.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Batteries are to be inserted with the correct polarity.
- Supply terminals are not to be short-circuited.

In the European market the dustbin symbol indicates that batteries, rechargeable batteries, button cells, battery packs, etc. must not be put in the household waste. Batteries containing hazardous substances are harmful to the environment and to health. Please help to protect the environment from health risks and tell your children to dispose of batteries properly and take them to the local collecting points. Batteries are recycled safely in this manner. The chemical symbols Hg (Mercury), Cd (Cadmium) or Pb (Lead) shown on the dustbin symbol indicates that the content of that chemical exceeds a certain limit.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

**IMPORTANT:** Remove all plastic attachments before giving to child.

Not suitable for children under 36 months, may contain small parts.

Some figures and accessories are sold separately.

Contents and colors may vary.

Chimney, window and steps must be assembled by an adult before give this toy to children.

Please retain these instructions for future reference.

CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963



© 2008 Learning Curve Brands, Inc.  
Oak Brook, Illinois 60523-1940 U.S.A.  
All Rights Reserved.  
Made in China.

Questions? Comments?  
Contact Consumer Care  
[www.LearningCurve.com](http://www.LearningCurve.com)