




# musical foot steps

instructions

112981 0406  
Early Learning Centre®  
Swindon SN3 4TJ England.

Customer Service Department  
08705 352352

## features

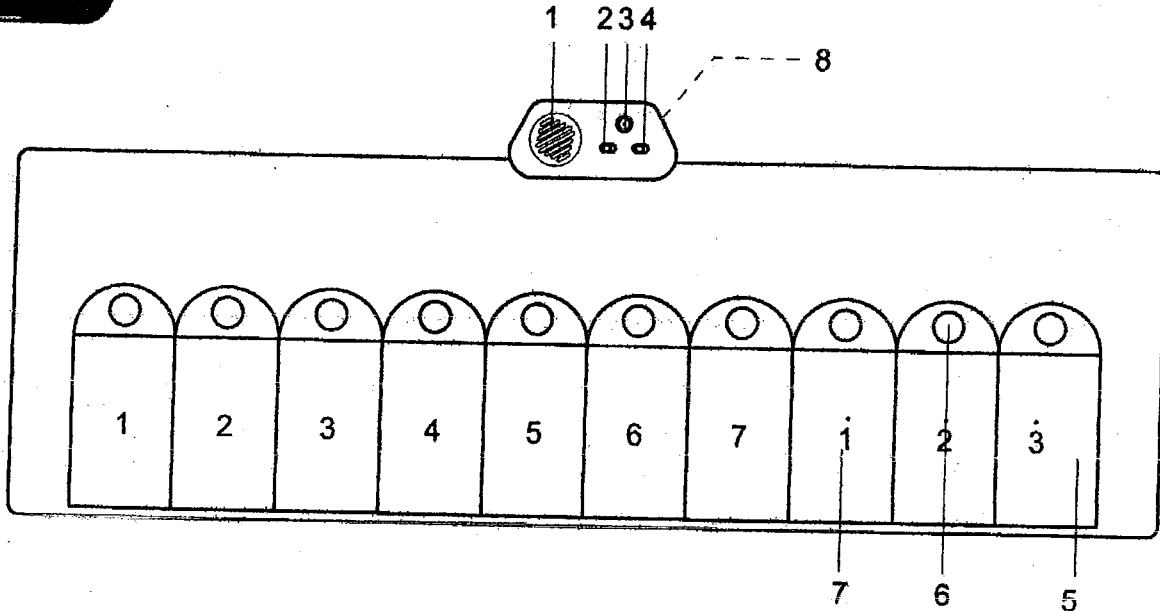

1. Speaker
2. Mode selector (Demo / Play / Learning)
3. Tempo knob
4. Power On/Off switch
5. Dancing mat
6. Colourful LED lights (x10)
7. Number keys (x10)
8. Battery compartment (rear side)

## Dancing Keyboard Instructions

- 1. To start playing**  
First place the mat on the floor, then insert the batteries in the battery compartment at the rear side. Slide the power on/ off switch to the "On" position and start playing.
- 2. To play demo song**  
Slide the mode selector to the "Demo" position.  
  
Step on a different key to play a different demo song. The demo song can be stopped by switching to a different mode. The colourful lights will flash when the demo song is playing.
- 3. To play piano**  
Slide the mode selector to the "Play" position.  
  
The mat has 10 keys and the colourful LED light will flash when the corresponding key is stepped on.

- 4. To play in learning mode**  
Slide the mode selector to the "Learning" position.  
  
Follow and step on the corresponding key with the flashing light to play a song. To stop playing before the end of the tune is reached, switch to a different mode.

- 5. To adjust Tempo**  
Adjust the tempo to speed up or slow down the music/ rhythm.

**Caution:**  
In the unlikely event of this toy malfunctioning, reset the toy by turning off and on again.