



phone & answering machine

play instructions


110545 0206
Early Learning Centre®
Swindon SN3 4TJ England.

Customer Service Department
01793 443322


features

Base Unit

1. Volume control
2. Rewind button
3. Record button
4. Stop button
5. Forward button
6. Play button
7. Battery compartment
8. ON/OFF switch

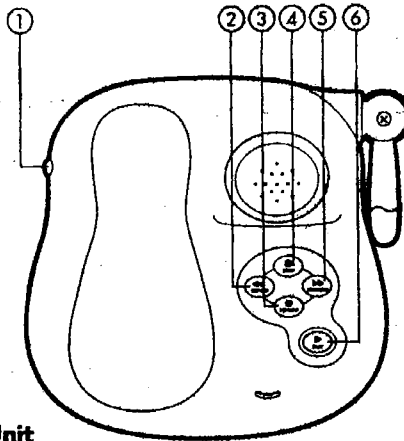


Base Unit

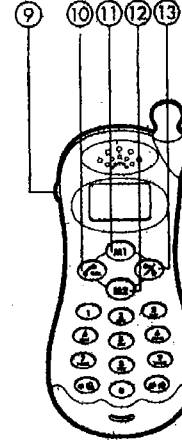


Handset

Handset

9. ON/OFF switch
10. Call button
11. Memory button 1
12. Memory button 2
13. Cancel incoming call button
14. Battery compartment

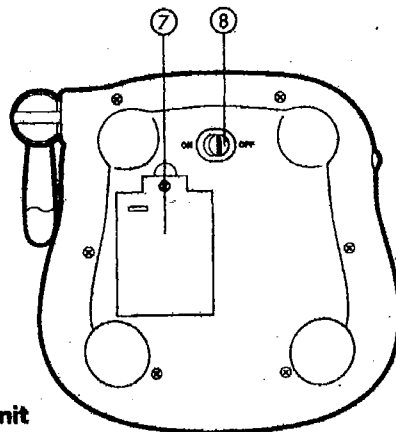

Back of Base Unit

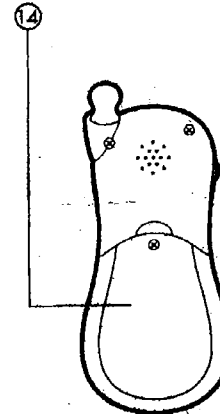

Back of Handset

how to play

Base Unit:

- 1) On/Off Switch
Switch button to 'ON' position to begin play. Product will enter 'stand-by' mode if left unattended for 2 minutes. Press any button to reactivate it.
Switch button to 'OFF' position to switch product off.
- 2) Fast forward/Rewind/Stop buttons
Press / / buttons for sounds
FORWARD REWIND STOP
- 3) Record/Playback buttons
Press and hold button to record a message up to 6 seconds. Press button to listen to the recorded message.
RECORD PLAY

Handset:

- 1) On/Off Switch
Switch button to 'ON' position to begin play. Product will enter 'stand-by' mode if left unattended for 2 minutes. Press any button to reactivate it.
Switch button to 'OFF' position to switch product off.
- 2) To save phone numbers to phone memory
Press 'M1', enter phone number, then press '#' to save.
Press 'M2', enter phone number, then press '#' to save.
- 3) Making a call using phone memory
Press 'M1' or 'M2', then press .
- 4) Making a call
Dial a phone number (minimum 3 digits), then press .
- 5) Receiving phone call
To pick up random incoming calls, press .
To refuse random incoming calls, press .
- 6) Making Emergency call
Press '999', then press .