




# real loving baby™ doll

## instructions

### contents

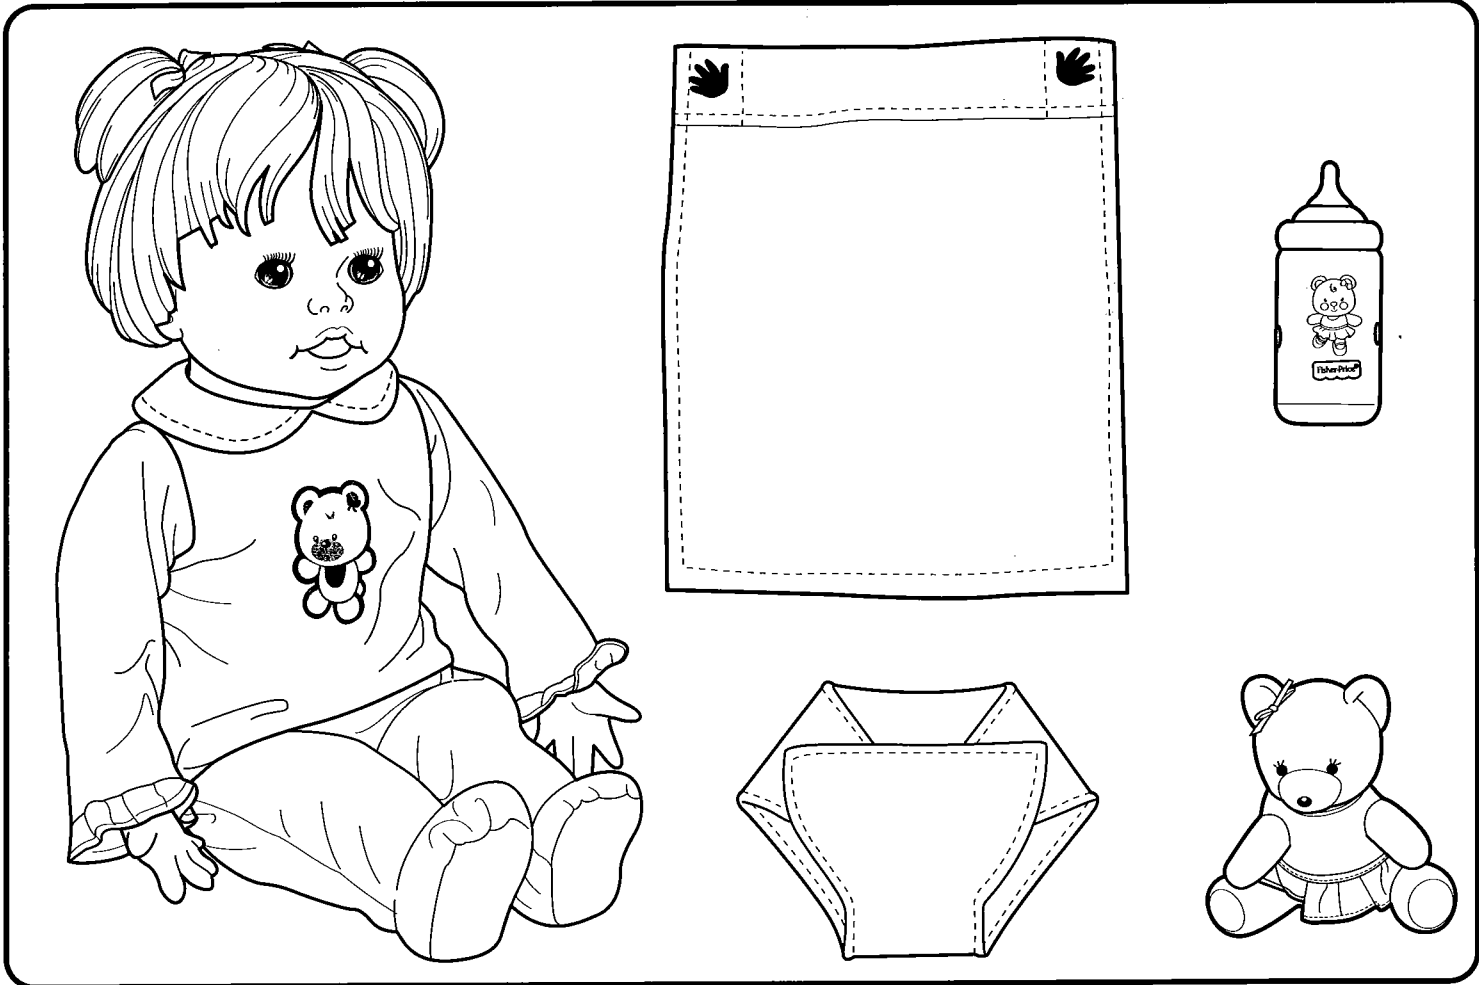

This product contains magnets. Do not use around items that are sensitive to or affected by magnetic fields.  
Requires 4 AA (LR6) alkaline batteries, not included.

Please remove everything from the package and compare to the contents shown here.  
If any items are missing, please call 1-800-524-8697.

Keep these instructions for future reference as they contain important information.

# Yes...just like a real baby!


Your doll will let you know when it's bed time.



"Uh oh...go potty"




Remove your doll's clothing and change the diaper as shown here.

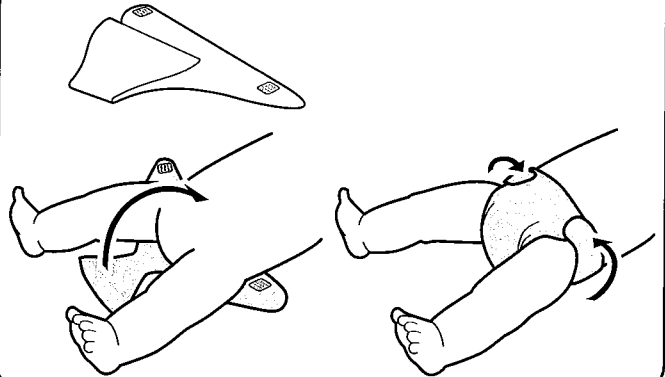

"Night night!"

Place the pink corners of the blanket on the doll's hands. Make sure the magnets connect. She will know the blanket is there and she'll pull it up and then down again. Her head moves some more and the cute sounds continue. *See the helpful tip.*

11a

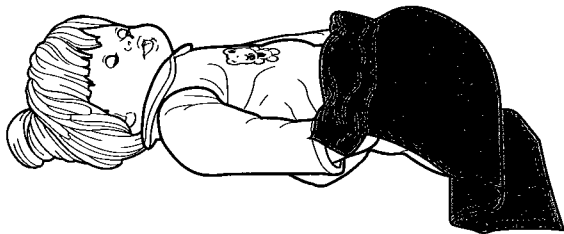


11b




11c




11d

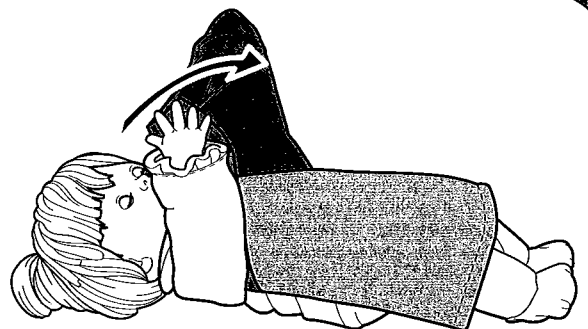

11e

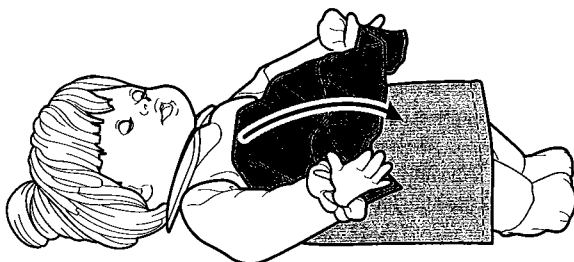

11f

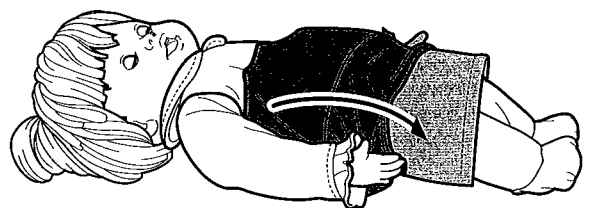


## Troubleshooting

The doll will not respond to her name if she is in motion or moving. She will always recognize her name best when spoken by the person who named her. The doll will recognize her bottle, blanket, or bear **only** after she has finished moving and speaking. These objects can also be taken away anytime, but the doll will realize they're gone only after she has finished moving and speaking.

# Battery Replacement

Replace batteries when sound becomes distorted or movement slows down.

For longer life use only alkaline batteries. Toy requires 4 replaceable AA/LR6 alkaline batteries. To replace batteries, open fabric on doll's bottom. Use a Phillips head screwdriver (not included) to open battery door. Pull out battery container. Insert 4 AA/LR6 alkaline batteries as shown. Place battery container into battery box, lining up metal contacts as shown. Replace battery cover and screw closed.

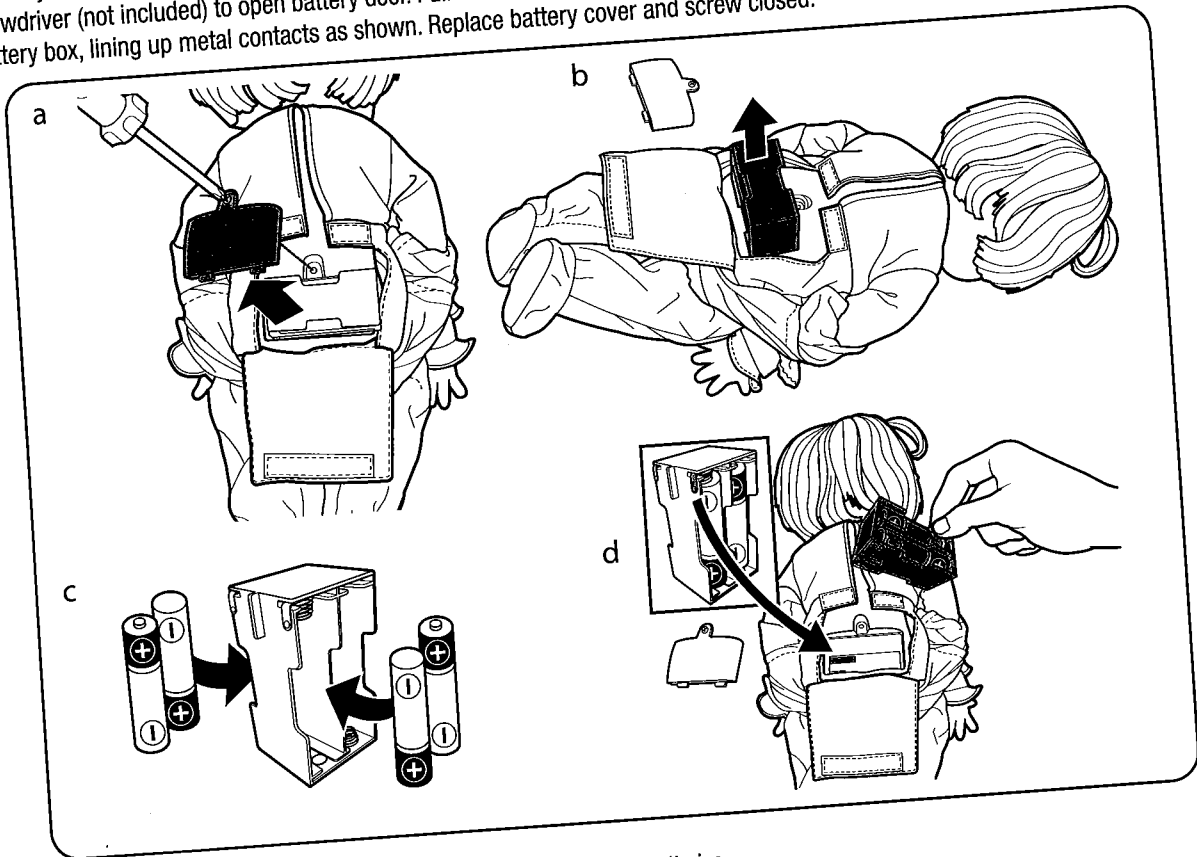

## Battery Safety Information

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium)

batteries.

- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

**NOTE:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

## For product sold in USA

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:  
 (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

For product sold in Canada • Pour les produits vendus au Canada

**THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.  
 CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.  
 (VALID FOR CANADA ONLY • VALABLE AU CANADA SEULEMENT)**

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
- L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes :
- (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même ce brouillage est susceptible de compromettre son fonctionnement.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

"We want you to have fun playing with our products, so please give us your feedback by filling out the short on-line survey. Go to [service.mattel.com/surveys](http://service.mattel.com/surveys)

Thanks for helping us make great toys even better!"  
 English-only site

## CONSUMER INFORMATION


Need Assistance? Visit [service.mattel.com](http://service.mattel.com) or call 1-800-524-8697 (US and Canada only), M-F 9AM - 7PM & SAT 11AM - 5PM, Eastern.

[SERVICE.MATTEL.COM](http://SERVICE.MATTEL.COM)

Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697.  
 Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303  
 Mattel Australia Pty., Ltd., Richmond, Victoria, 3121. Consumer Advisory Service - 1300 135 312.  
 Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.  
 Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Course, 47410 P.J. Tel: 03-78803817, Fax: 03-78803867.  
 Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A. Consumer Affairs 1 (800) 524-8697.

# She "talks," "drinks," mo

● Turn on power.

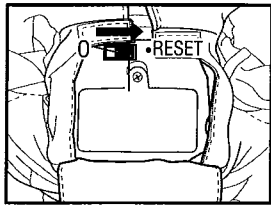

Before turning on the doll for the first time, take her to a quiet place, without any background noise. Your doll will be able to hear her new name more clearly.



**Speak to the doll within 12-18 inches (30-45 cm) for the best recording.**

To name your doll, follow what the narrator says: "Hi little mommy. What's your baby's new name? When you hear this sound (bell sound), say your baby's name. Okay, ready? (Bell sound.)" Say your baby's name after you hear the bell sound. You will then hear: "Good! Now say the name one more time after the sound (Bell sound)." Repeat your baby's name again. If the doll recognized the name, you will hear "My name, mommy (giggles)! I think she likes it! Yes, yes!" If the doll did not recognize the name, this sequence repeats from the beginning. The doll remembers her name and responds to her name forever.\*

\*If you forget your doll's name or the doll has trouble recognizing the name you gave her, ask an adult to insert a metal tip, such as a bent paper clip, into the reset hole (next to the power switch). Then you can give your doll a new name by repeating the steps above. When exposed to an electrostatic source, the product may malfunction and suffer memory loss. Reset the product if this occurs.

**When your doll hears her name, she'll play with you. Just follow what she asks for or does!**

Your doll will respond when she hears her name. She will go through random sequences of play including hug, kiss, blow kiss, peek-a-boo, tickle, sleepy, potty. She could also ask for her bear, blanket, or bottle. What she says can change and if she doesn't get what she asks for, she can get pouty!


● Give your doll a hug when she says "Hug, Mama!"



● Place the bottle in the doll's hands and she raises it to her mouth.


You can hold her bottle to her mouth to "feed" her too.

See helpful tips below.

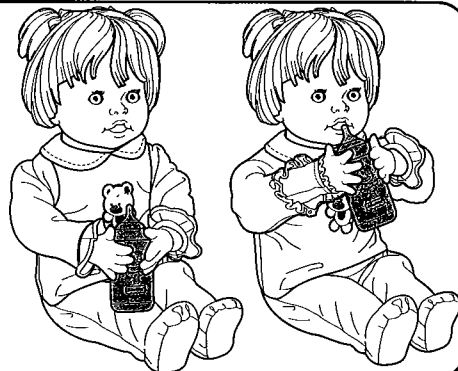

● Place the teddy bear in the doll's hands. She says "Teddy bear!" and raises it up to show you!

See helpful tips below.

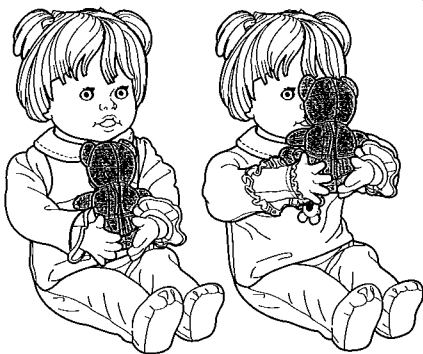

● Play "Peekaboo!"



● "Kiss, kiss!"




● Tickle your doll by pressing her belly. Giggle....



## Helpful Tips

Be sure the special spots on the bottle, teddy bear, or blanket touches the spots shown on the doll's palms.

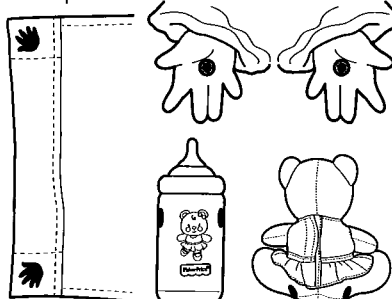

If you have placed the bottle, blanket or bear in the doll's hands and the magnets are connected, but she is not responding, try sliding the item to a slightly different position in her hands.