



 
# wooden art easel

assembly instructions

1145040506  
Early Learning Centre®  
Swindon SN3 4TJ England.

Customer Service Department  
01793 443322


## contents

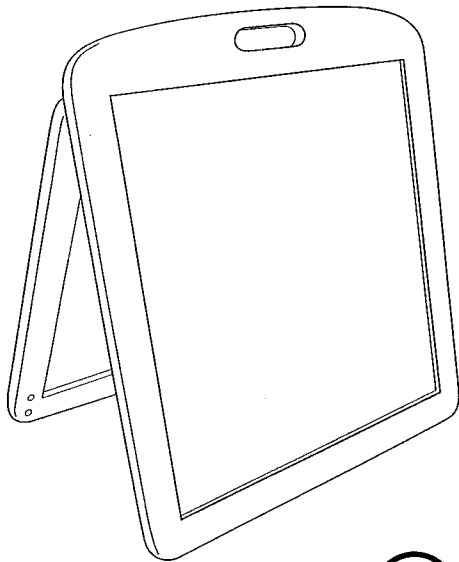


(A) x1



 
(D) x1



 
(E) x1

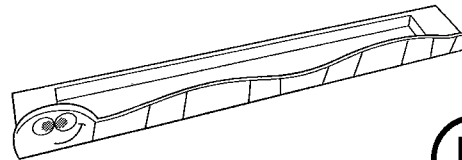

 
(F) x2

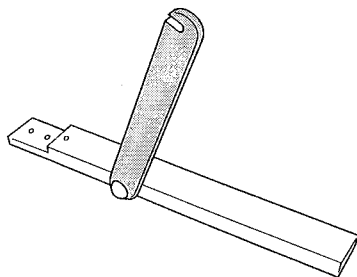

 
(B) x1



 
(G) x2

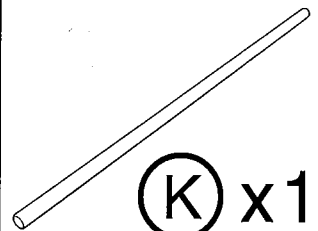

 
(K) x1



 (H) x2

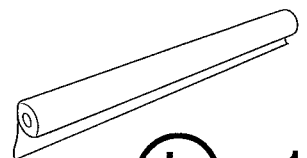

 
(L) x1

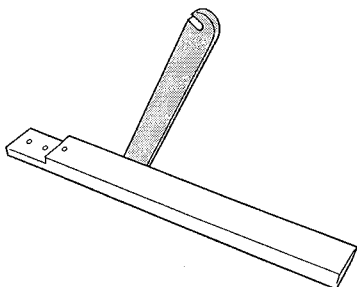


(C) x1



 (I) x4



 (J) x8




(M) x4




(N) x4

assembly

 
1

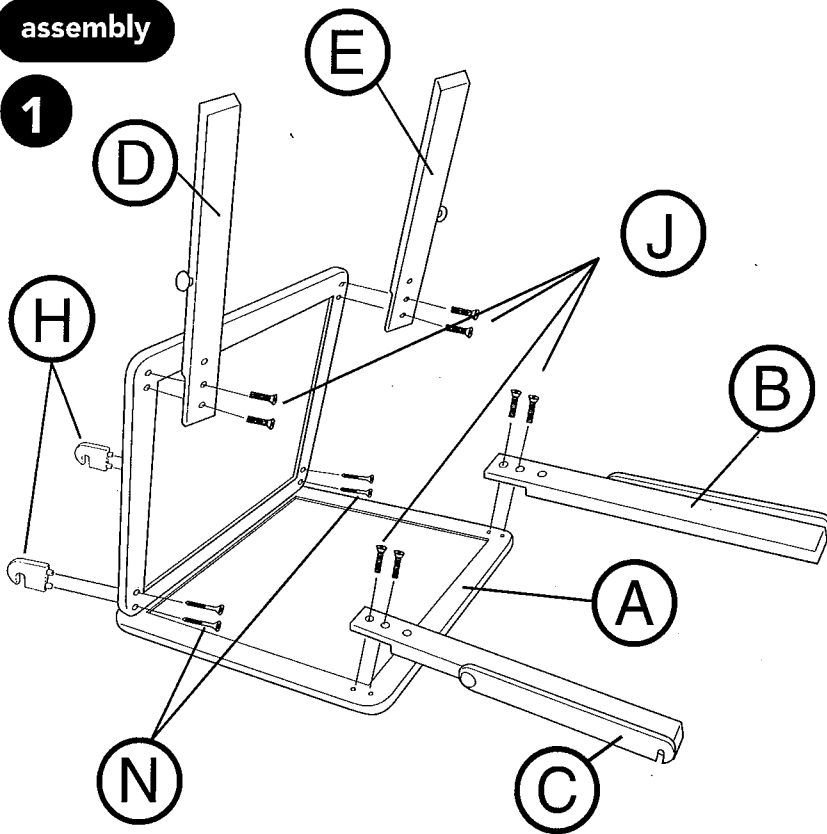

2

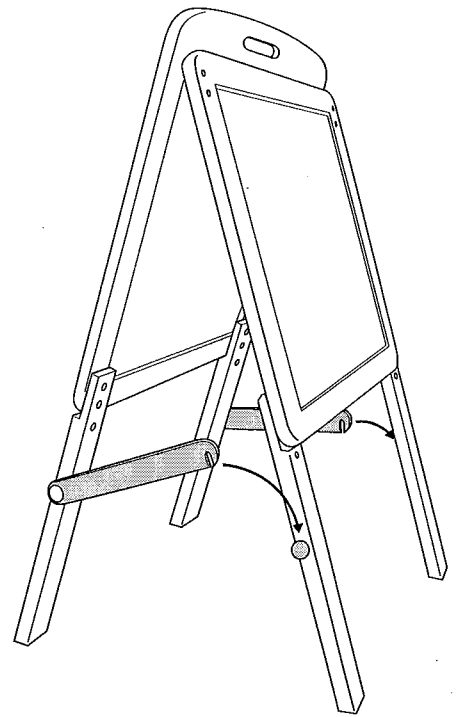 

3

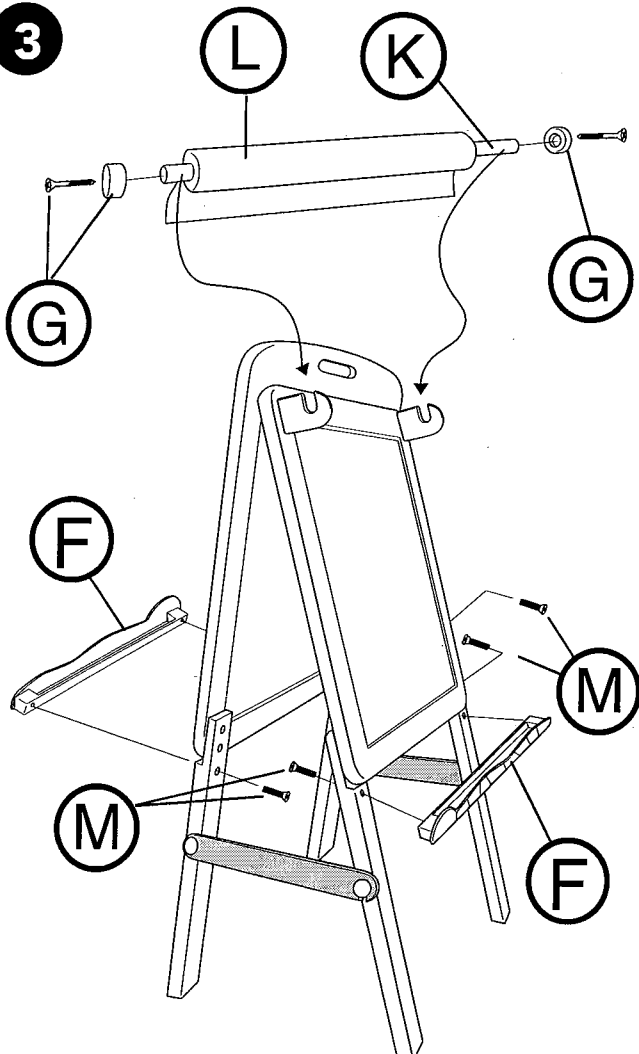 

4

