




carry along keyboard

instructions

134445/141718 0315
Early Learning Centre®
Watford WD24 6SH England.

Customer Service Department
0371 231 3513

features

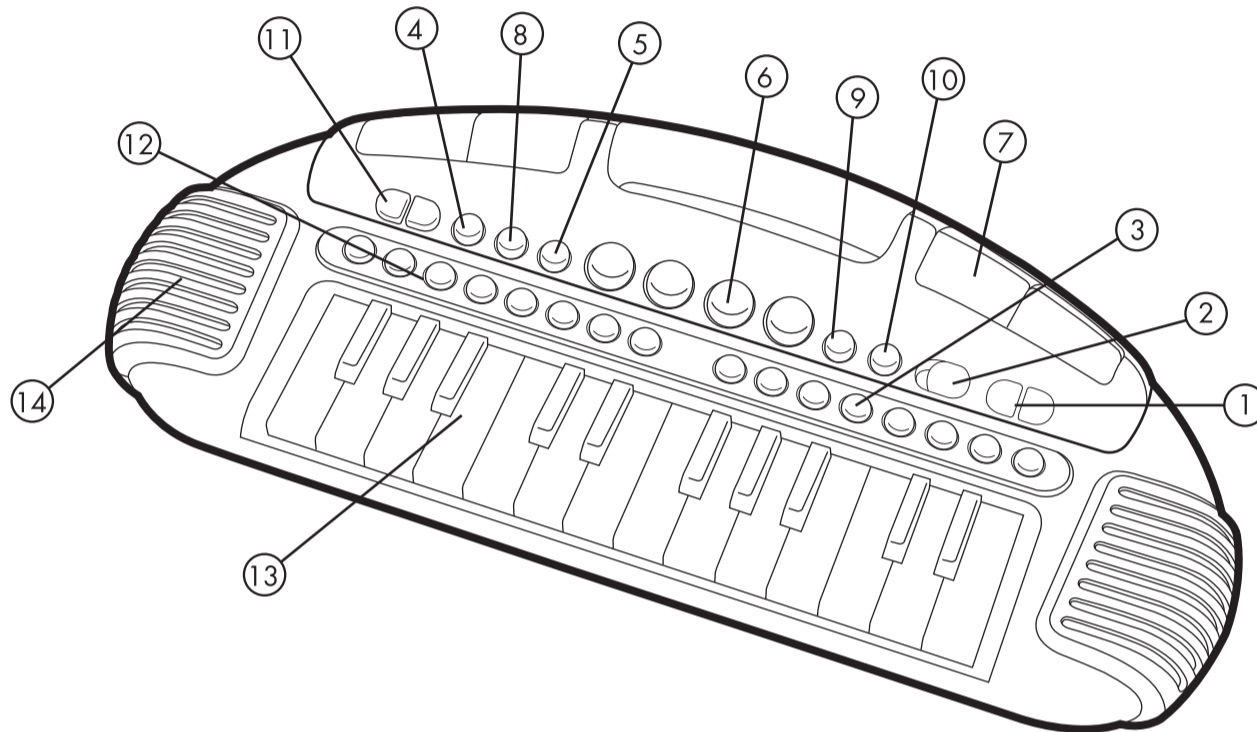

1. **Volume control** - press the buttons to adjust the volume
2. **On / Off switch**
3. **Instrument buttons** - 8 instruments to choose from
4. **Record button** - press the record button to record a melody
5. **Play button** - press the play button to play back the melody that you have recorded
6. **Drum buttons** - 4 drum sounds to choose from
7. **Bright flashing lights** - lights flash to the beat of the rhythm
8. **Stop button** - press to stop all functions
9. **Demo all button** - press to hear 6 preset tunes
10. **Demo button** - press to hear 1 preset tune
11. **Tempo control** - press the buttons to adjust the speed of the tempo
12. **Rhythm buttons** - 8 rhythms to choose from
13. **24 keys keyboard**
14. **Speaker**

Note:

- If the keyboard suddenly stops working, or if the voice / sound becomes faint, the problem maybe due to low battery power. If this is the case, install a new set of batteries.
- If the product malfunctions or "locks up", switch off and back on again or remove and re-insert the batteries.

SKU no.	134445/141718	Initial Check	Final Check	Final Approval	Sign-off (to be used)
Name	carry along keyboard	Checked by	Checked by	Checked by	Checked by
Buying team	M&L	Date	Date	Date	Date
Supplier	Honorings	Checked by	Checked by	Checked by	Checked by
Designer	Dorothy	Checked by	Checked by	Checked by	Checked by
Date created	10.03.15	Checked by	Checked by	Checked by	Checked by

AW15

K