

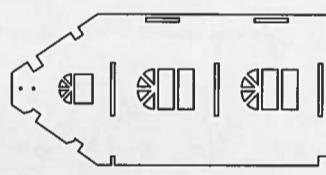
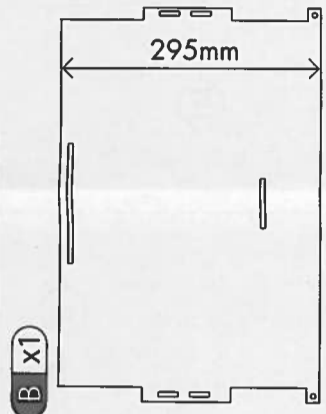
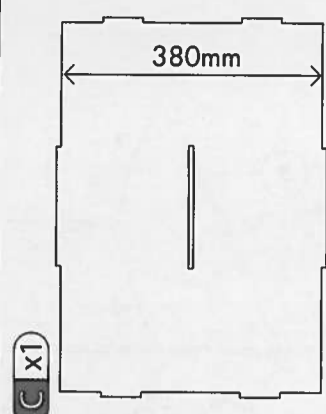
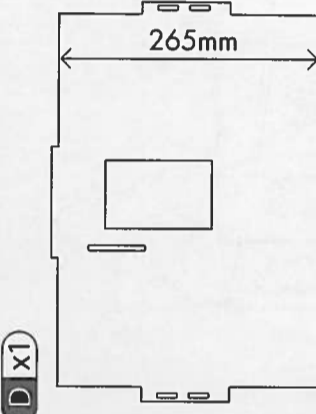
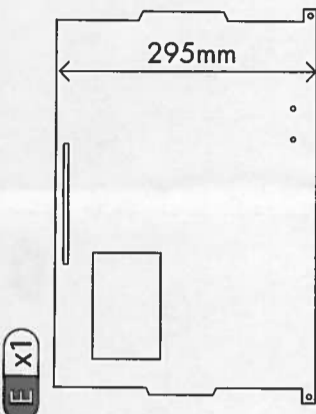
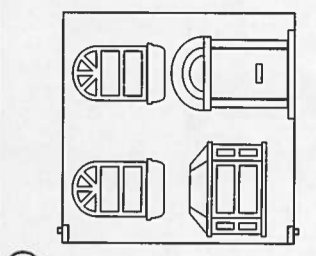
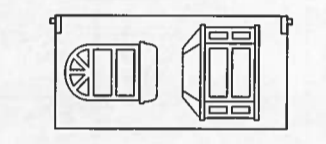
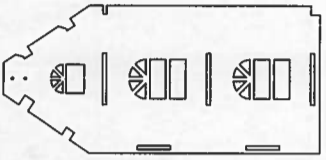
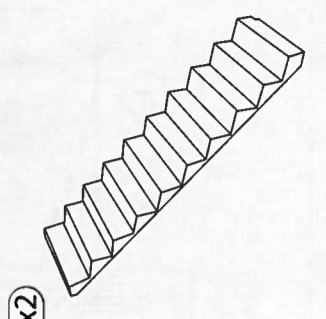
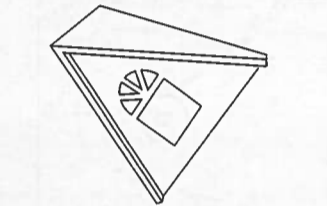
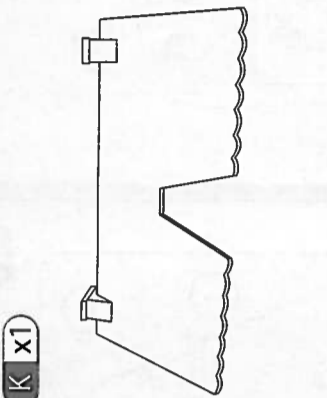
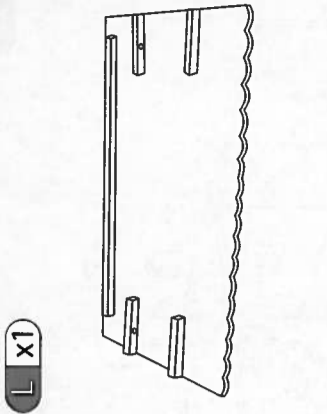
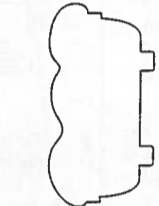
 

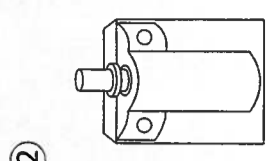




# Rosebud house user guide

139084 0414  
Early Learning Centre®  
Watford WD24 6SH England.

Customer Service Department  
0871 231 3511

## contents

<p><b>A x1</b></p> 	<p><b>B x1</b></p> 	<p><b>C x1</b></p> 	<p><b>D x1</b></p> 	<p><b>E x1</b></p> 	<p><b>F x1</b></p> 	<p><b>G x1</b></p> 	<p><b>H x1</b></p> 	<p><b>I x2</b></p> 	<p><b>J x1</b></p> 	<p><b>K x1</b></p> 	<p><b>L x1</b></p> 	<p><b>M1 x3</b></p> 	<p><b>N x2</b></p> 	<p><b>O x7</b></p> 	<p><b>Q x2</b></p> 	<p><b>M2 x1</b></p> 	<p><b>P x4</b></p> 
--	--	--	---	---	---	--	--	--	--	--	--	---	--	--	--	---	--