

diner kitchen

assembly instructions

141199 0515
Early Learning Centre®
Watford WD24 6SH England.

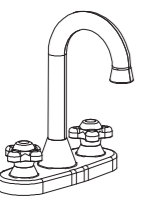
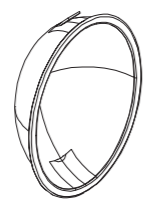
 



 




 
Customer Service Department
0371 231 3513

contents

Equipment Needed: 1 x cross head screwdriver
1 x flat head screw driver

1 x1 	2 x1 	3 x2 	4 x2
5 x1 	6 x1 	7 x1 	8 x1
9 x1 	10 x1 	11 x4 	12 x1
13 x2 	14 x1 	15 x1 	16 x1
17 x1 	18 x1 	19 x1 	20 x1
21 x1 	22 x1 	23 x1 	24 x1
25 x1 	26 x1 	27 x1 	28 x2

contents

29 x1 	30 x1 	31 x3 	32 x31 
33 x8 in red 	34 x39 	35 x17  ø3 5 x 21	36 x10  ø3 x 19
37 x24 	38 x4 	39 x3 	40 x3 

A

B

C

D

E

F

assembly

G

H

I

J

K

L

M

N