




sing - star - microphone

user guide

141723/136785 0116
Early Learning Centre®
Waford WD24 6SH England.


Customer Service Department
0371 231 3513

parts checklist

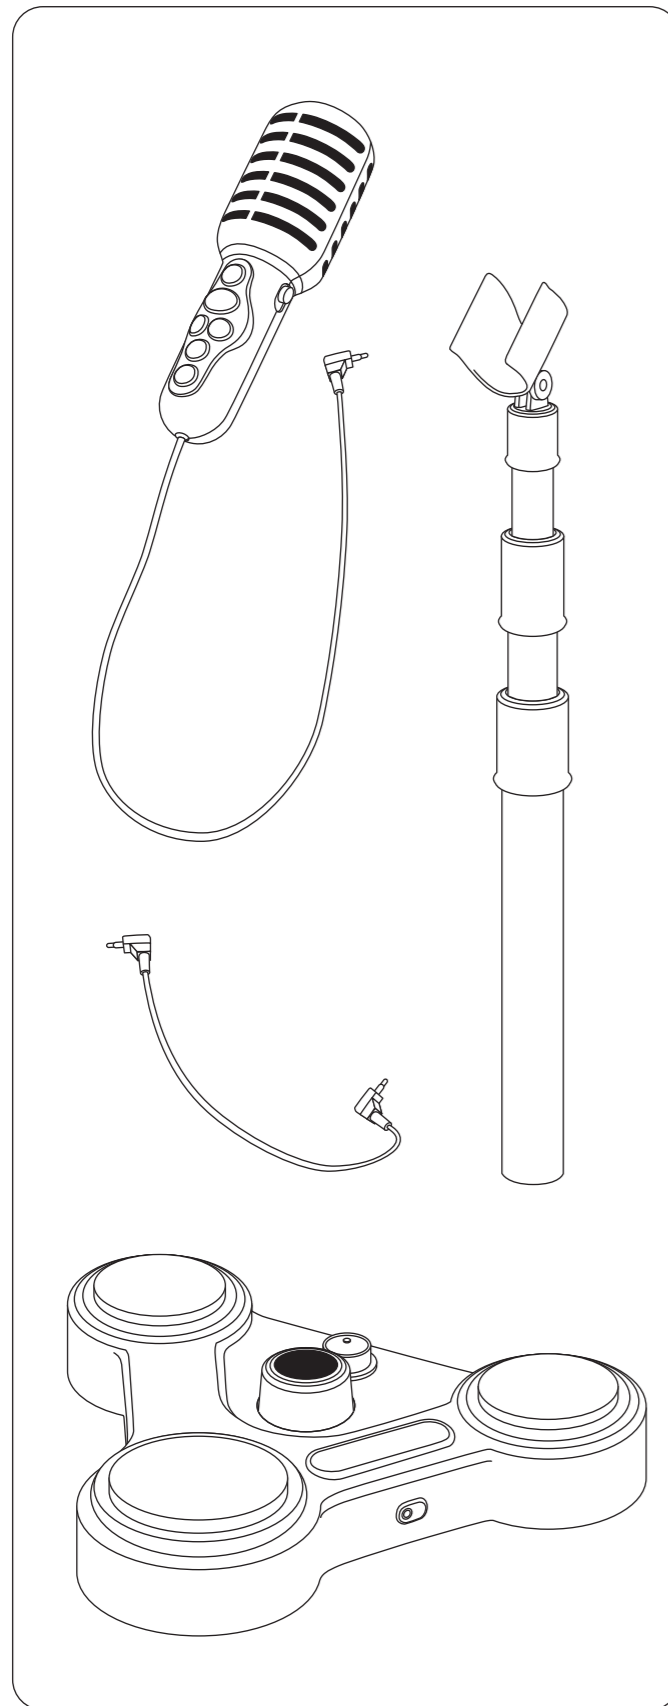






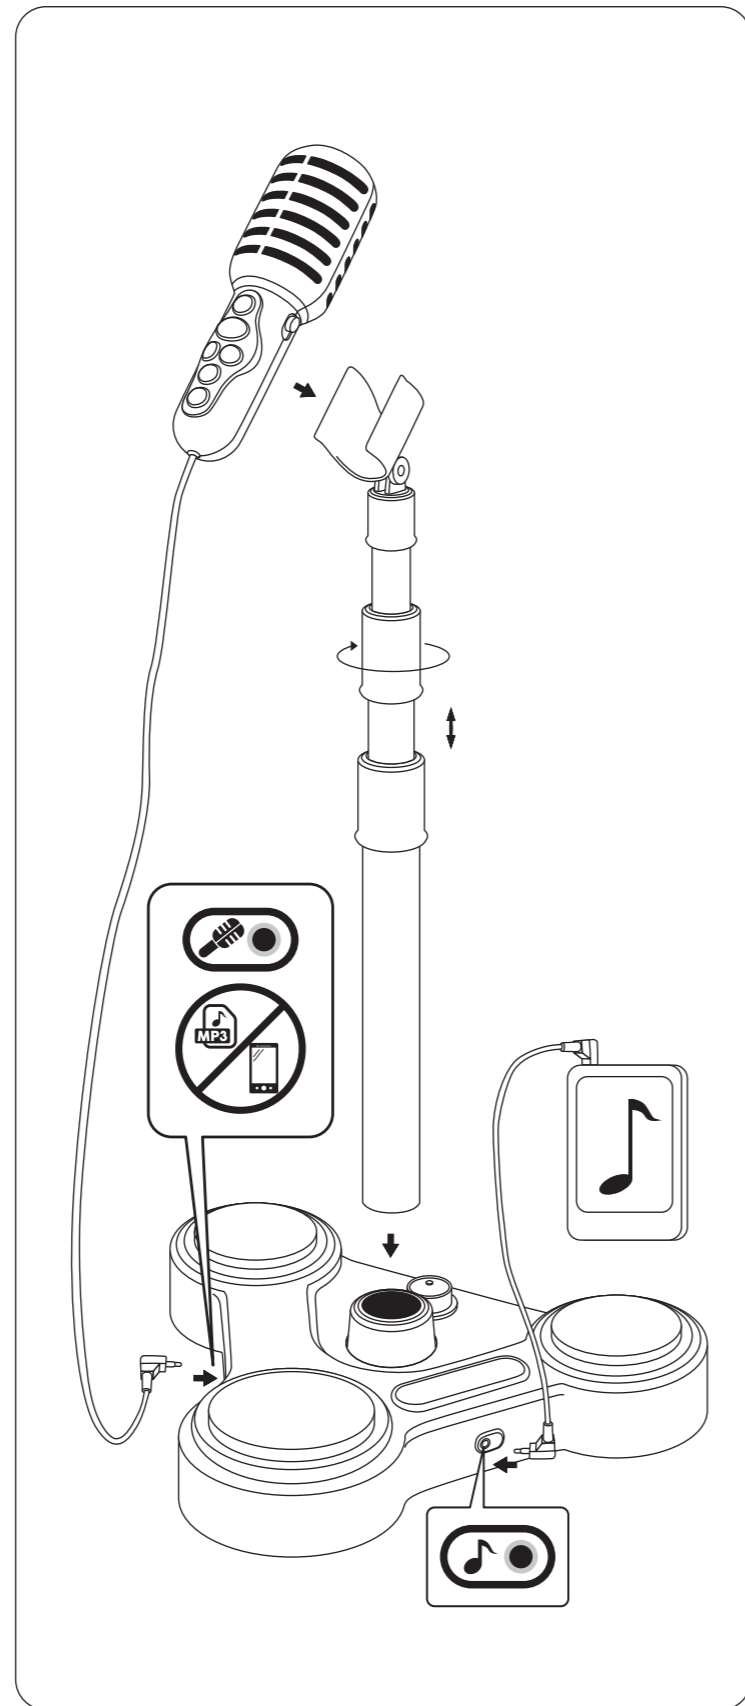

assembly

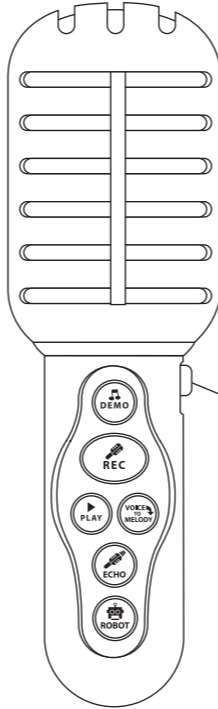Warning! Adult assembly required.



how to play

		<ul style="list-style-type: none"> • Press the button to hear 5 demo songs and 5 rhythms. • The light flashes to the rhythm.
		<ul style="list-style-type: none"> • Press the button to hear a "beep," you can then begin to record your voice for a maximum of 5 seconds. • Press again to stop or the recording will automatically stop after 5 seconds followed by 2 "beeps."
		<ul style="list-style-type: none"> • Press the button to hear the recorded voice once. • While the demo song is playing, press the PLAY button to play your recorded voice. • While the Echo or Robot button is pressed, press the button to play the recorded voice.
		<ul style="list-style-type: none"> • Press the button to hear your recorded voice turn into 3 fun melodies. • The light flashes to the rhythm.
		<ul style="list-style-type: none"> • Press the button for echo sound effects, press again or another button to go into another mode (otherwise it stays in echo mode). • The light flashes in this mode.
		<ul style="list-style-type: none"> • Press the button for robot sound effects, press again or another button to go into another mode (otherwise it stays in robot mode). • The light flashes in this mode.

* The unit goes to sleep if left idle for 3 minutes. Press any button on the microphone or stand to reactivate the unit.

* Record your voice in a quiet environment to ensure better playback quality.

