




lights and sounds phonics desk

user guide

142465 0915
Early Learning Centre®
Watford WD24 6SH England.

Customer Service Department
0371 231 3513

features

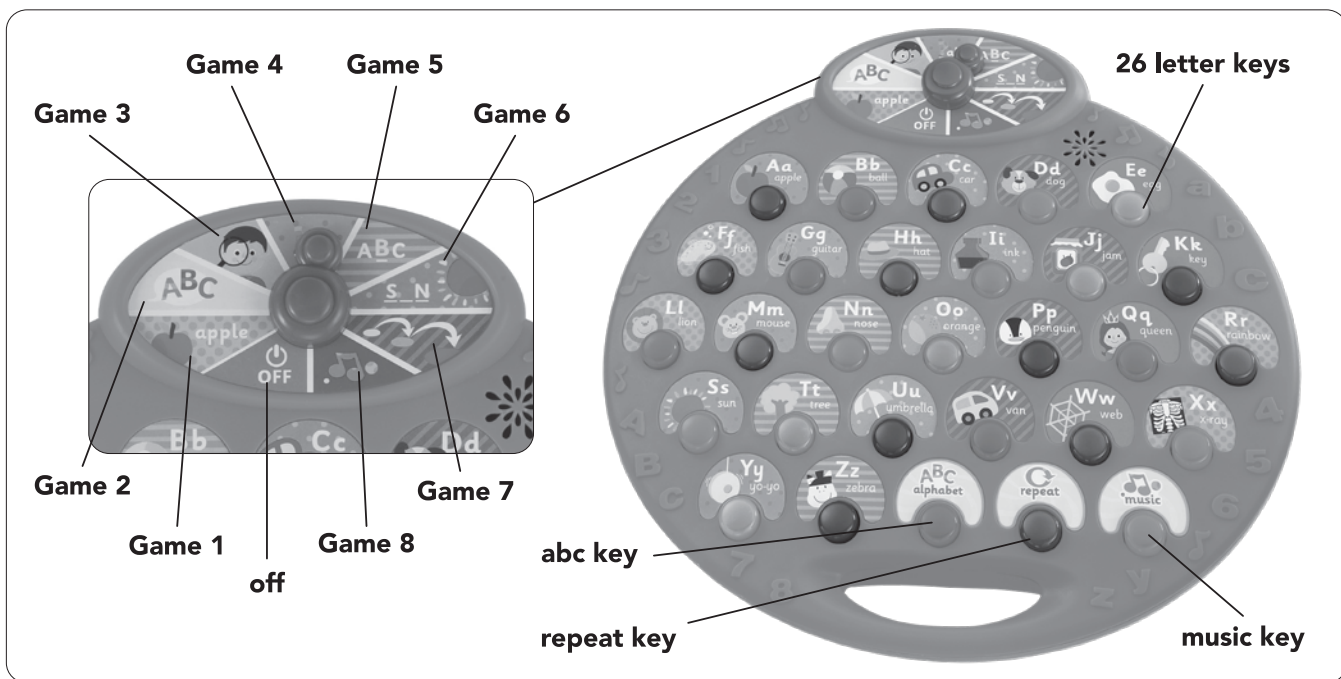

• letter keys :

Use these letter keys to play or answer questions.

• abc key :

By pressing this key at any time, the unit will interrupt the game and say the alphabet in order with flashing lights.

• repeat key :

By pressing this key, the unit will repeat the game instructions.

• music key :

This is a music key, by pressing it at any time, the unit will interrupt the game and play a tune with flashing lights.

how to play

*Once the batteries have been inserted, move the Game selector to choose 1 of 8 games.

*The unit will automatically begin with the selected game.

Game 1 : Touch & tell

Press a letter key to hear its corresponding word and sound.

Game 2 : Letter names & sounds

Press a letter key to hear its name and sound (phonics).

Game 3 : Find...

The unit will ask you to find the object. You have three attempts. If after three attempts you have not found the object, the unit will tell the correct answer and say: 'Here it is'.

Game 4 : The first letter

The unit will ask you to find the first letter of a spoken word ('Find the first letter of the word Apple'). You have three attempts, if after three attempts you have not found the correct key the unit will tell you the correct answer.

Game 5 : Find the phonic

The unit will ask you to find the letter which corresponds to the phonic sound of a spoken word. You have three attempts, if after three attempts you have not found the correct key the unit will tell you the correct answer.

Game 6 : Word spelling

The unit will invite you to spell words. The illustrations on the keys will assist you. If a word is misspelled, the unit will then spell the word again.

Game 7 : Follow me

The unit will play a sequence of notes. Will you be able to reproduce the melody in the correct order? Take care you have only one try!

Game 8 : Fun sounds

Press any key to hear the corresponding sounds and create your own funny sequence!

AUTOMATIC SHUT OFF

In order to save the battery life, the unit switches off after two minutes of inactivity. To re-activate the unit, just press any key.

battery notice

BATTERY SAFETY: Please refer to the battery warning leaflet enclosed