assembly

Fig.1

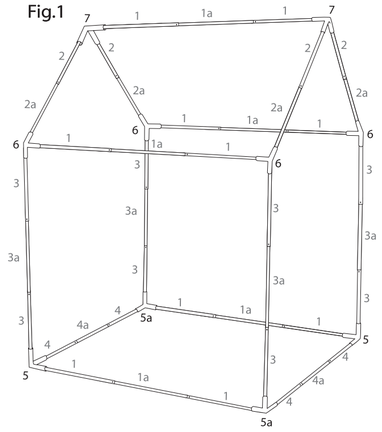

Fig.2

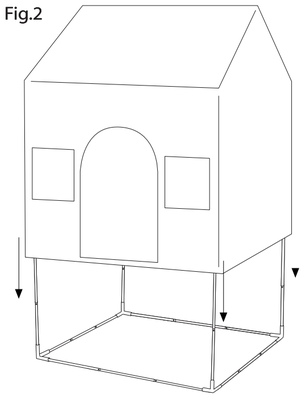

Fig.3

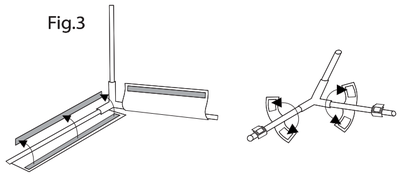

1. Before you start, identify the parts & group poles of the same type together. For easy identification the poles are labelled with a numbered sticker. Divide the corner pieces as shown in Fig.1

2. Put the framework together as shown in Fig1. Please ensure parts 5 & 5a are in the correct order (Fig.1) It is essential to ensure all brackets are pushed firmly into each pole & the connector locks into the receiver. The first time you use the playhouse it may be necessary to gently knock the connectors into place. Be careful to use the correct shape brackets for the base of the play house and for the roof.

3. Next, pull the fabric over the frame work as shown in (Fig 2). It is esigned to be a tight fit, maske sure the top of the roof is correctly in place & then work down to the base.

4. Finally, secure the fabric to the frame using the hook & loop strips around the roof & side poles (see Fig 3). Your Fantasy Cottage is now ready for use!

fantasy cottage

instructions

111979 0206
Early Learning Centre®
Swindon SN3 4TJ England.

Customer Service Department
08705 352352

contents

1 x10	5 x 2	5a x 2	6 x 4
1a x 5	*corner pieces - base*	*corner pieces - base*	*corner pieces - roof ends*
2 x 4	7 x 2	8 x 1	9 x 1
2a x 4	*corner pieces - roof top*	*corner section bag*	*pole bag*
3 x 8	10 x 1	11 x 1	12 x 1
3a x 4	*storage bag*	*instruction sheet*	*shell*
4 x 4			
4a x 2			

Safety Advice

IMPORTANT: Please read this instruction leaflet fully before starting assembly.

ASSEMBLY: The putting up & taking down of this product should always be done by an adult. It is recommended that two adults assemble this product together, due to the size & weight.

WARNING! This product contains small parts

NEVER let small children assemble or pack this product for storage.

ALWAYS assemble and place on a clear flat surface away from sharp objects and stones.

WARNING! Keep away from fire.

NEVER allow a naked flame near this product - although it is made from fire retardant fabric, it will burn if left in continuous contact with a naked flame.

AFTER CARE : After assembly, check regularly to ensure all parts are secure and no damage has been sustained. If broken, discontinue use , as failure to do so may result in in jury.

DO NOT leave outdoors in cold or wet weather.
Store indoors in winter.

CLEAN ONLY with a damp cloth-other cleaning substances might render the flame-retardant coating ineffective.

NEVER shelter in this toy during a thunderstorm. This is not waterproof or made for camping.
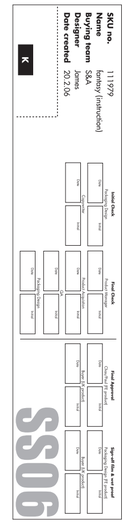
DO NOT continue to use this toy if any part of the steel frame becomes bent or broken. Immediately coontact Early Learning Centre in the event of any failure.