



Where dreams have room to grow

3+



Beautiful fabric walls



Finely crafted accessories

COTTAGE ASSEMBLY INSTRUCTIONS

WARNING!
 Warning! Keep away from fire.
 Adult assembly required.
 Clean only with a damp cloth.
 Only use this product on level ground, clear of any toys or other objects.
 Do not continue to use this product if any part of the frame becomes either bent or broken, immediately contact our Customer Services department in the event of a failure.
 Constant adult supervision is recommended.
 Recommended for children from 3 years.
 For indoor use only.
 Retain instructions for future reference.

 The Innovation Factory
 St. Columb Major
 Business Park,
 Cornwall
 TR9 6SX
 United Kingdom

CUSTOMER CARE
 FREEPHONE: 0800 389 8591 (UK only)
 customercare@worldsapart.com
 www.worldsapart.com






Not suitable for children under 36 months due to small parts.
 Adult assembly required.

© 2007 Worlds Apart Limited.
 All rights reserved.
 Patent Pending
 Design Right Worlds Apart Limited.



Made in China




Cottage Contents

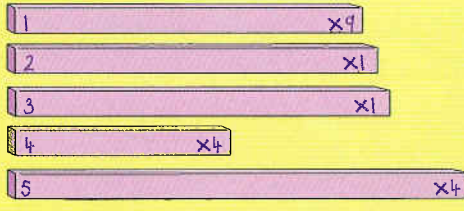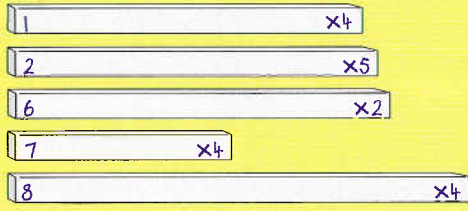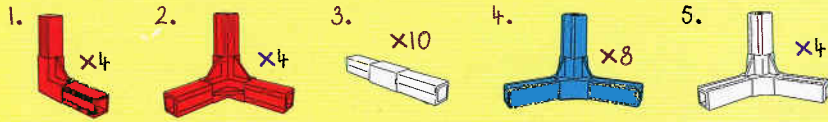

Frame Assembly

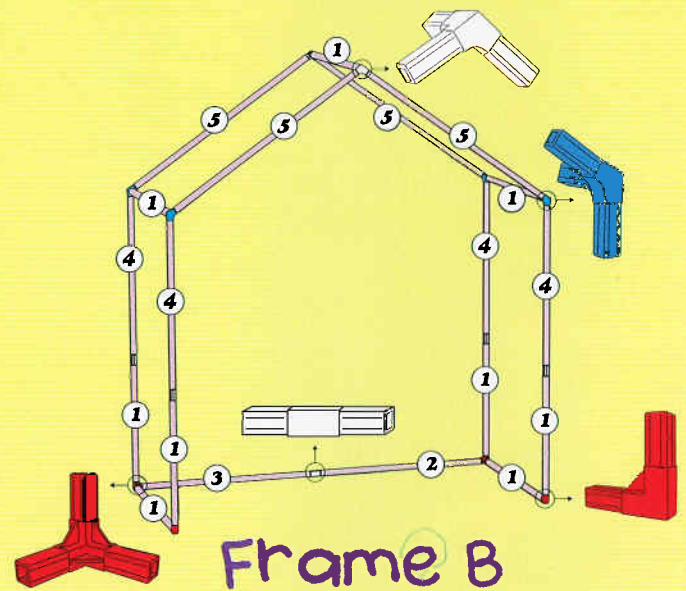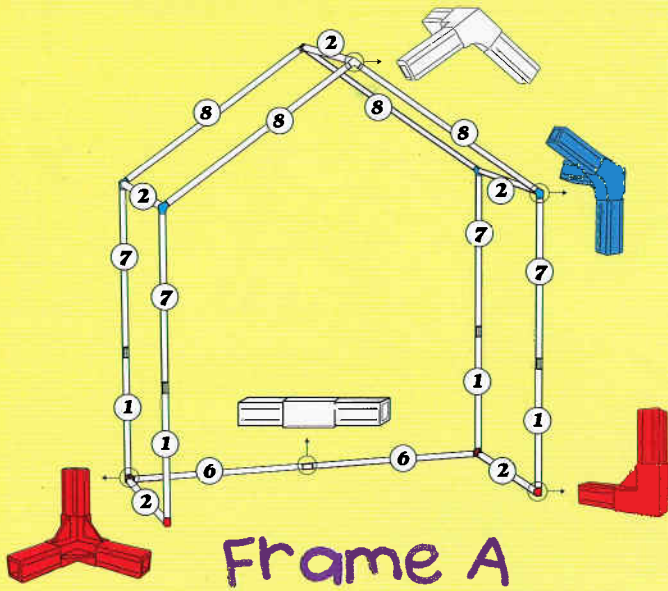


Cover Assembly - A

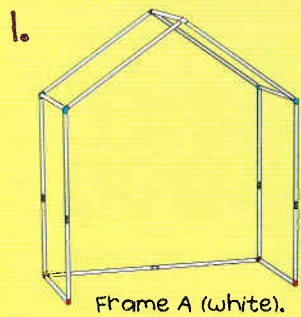

2. Locate zip on back panel and fully unzip.




3. Separate the 3 hook & loop sections.

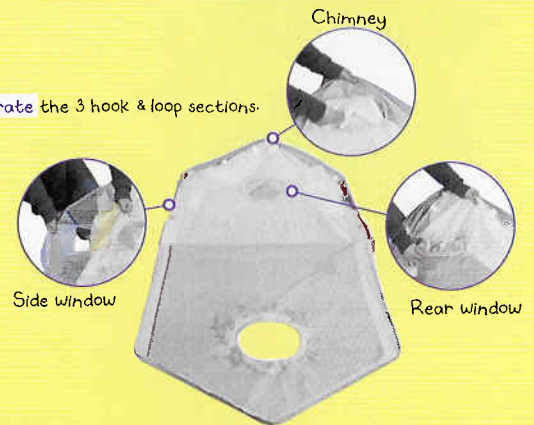

4. Locate the inner RED seam on the base.




5. Locate the peak of the inner cover.

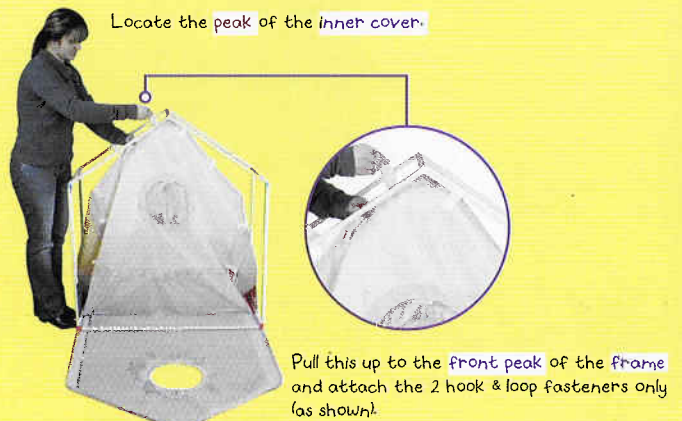

6. Pull the peak of the outer cover up onto the peak of the frame (as shown).

B. Pull the corners of the outer cover onto both corners of the frame (as shown).

7. Carefully pull the cover over the frame. Blue seam to line up with blue mouldings.

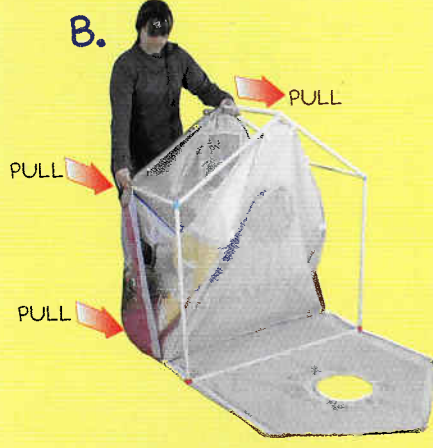


Once frame fully inserted into cover, fasten the remaining 8 hook & loop fasteners over the frame.



Zip up rear panel and re-attach the Chimney, Side window and Rear window hook & loop sections.

Cover Assembly - B

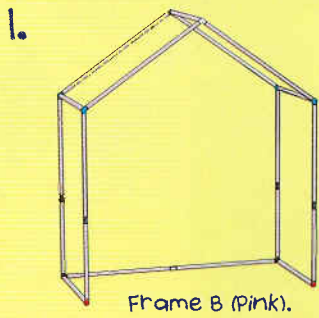


2. Locate door zip and fully unzip leaving the zip open when done.



3. Locate zip on back panel and fully unzip.




4. Separate the window hook & loop sections.

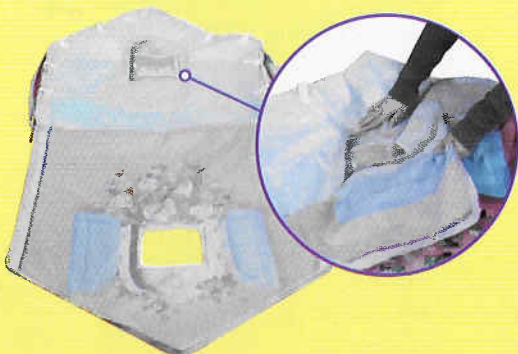

5. Locate the inner RED seam on the base.




6. Locate the peak of the inner cover.

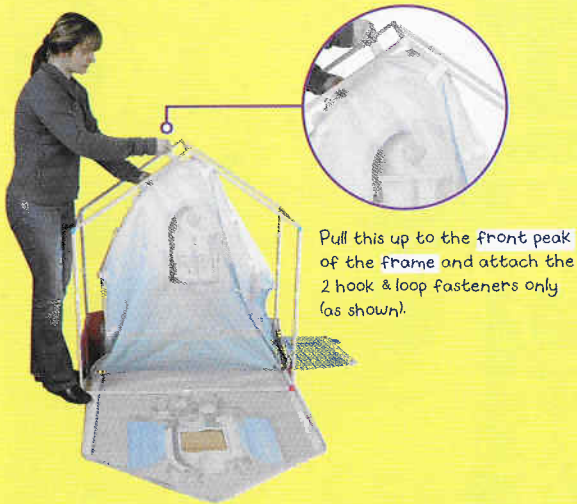

7. A. Pull the peak of the outer cover up onto the peak of the frame (as shown).


B. Pull the corners of the outer cover onto both corners of the frame (as shown).

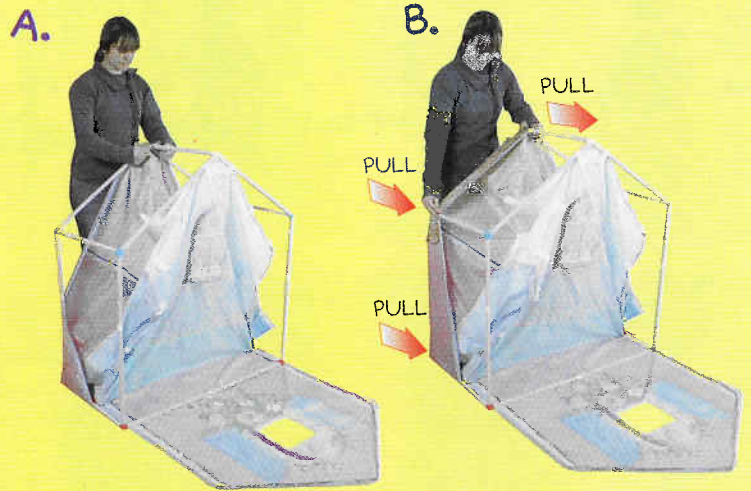

8. Carefully pull the cover over the frame. Blue seam to line up with blue mouldings.



9.

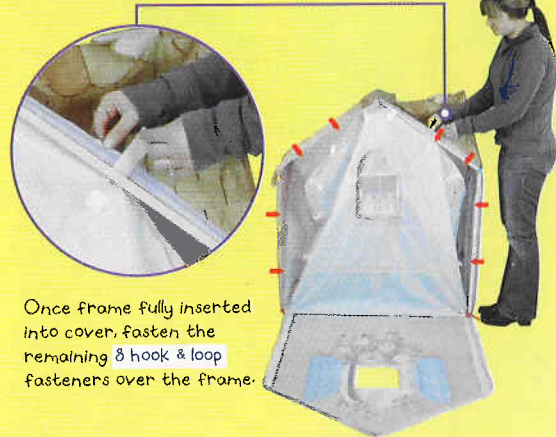

10.


Zip up rear panel. Re-attach the rear window fasteners.




11. Zip up door panel



Slot zipper into opening and close zip.

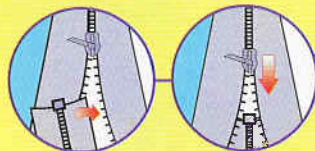

12. Insert roof rod

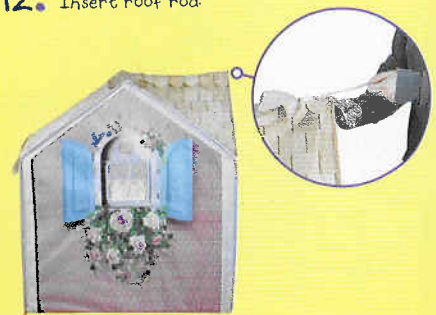

STORAGE



A. Remove roof rod.



B. Store roof rod under ridge (as shown).



C. Cottage B fits inside Cottage A

Cooker Assembly

1. Lay back panel flat
2. Press the side panels into the back panel
3. Press the front panel onto the sides
4. Insert shelf
5. Press the cooker top onto the base

